



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	456	6092	CRANKSHAFT(L.H. ROTATION)	1		
1	456	7680	CRANKSHAFT(R.L. ROTATION)	1		
2		68700	SPROCKET, CRANKSHAFT	1		
3	28	67382	KEY, SPROCKET AND ALTERNA	2		
4	398	6231A 6	STATOR ASSEMBLY, ALTERNAT	1		
5	10	77363	SCREW, STATOR TO FRONT CO	5		
6	13	26996	LOCKWASHER, STATOR TO COV	5		
7	54	73667	"J" CLIP, ALTERNATOR LEAD AT	1		
8		93009A 1	ALTERNATOR ASSEMBLY, FLYW	1		
9	10	59644	SCREW, ALTERNATOR ATTACHI	1		
10	12	36103	WASHER, ALTERNATOR ATTACI	1		
11	251	7714	FLYWHEEL (MCM)	1		
11	251	8478A 3	FLYWHEEL (INBOARD)	1		
12	16	32808	STUD, FLYWHEEL TO COUPLING	6		
13		69354A 2	COUPLING ASSEMBLY (MCM)	1		
14	12	32648	WASHER, FLYWHEEL TO COUPL	6		
15	11	34933	NUT, FLYWHEEL TO COUPLING	6		
16	10	49845	SCREW, FLYWHEEL TO CRANKS	6		
17	13	39131	LOCKWASHER, FLYWHEEL SCF	6		
18		77934	DRIVE PLATE, FLYWHEEL (INBO	1		
19	10	56889	SCREW, DRIVE PLATE TO FLYW	6		
20	13	26993	LOCKWASHER, DRIVE PLATE AT	6		
21	10	74335	SCREW, MAIN BEARING CAPS	10		
22		68750	SEAL, REAR BEARING CAP	2		
23		74313A 1	MAIN BEARING ASSEMBLY (STD	4	WHEN ORDERING REPLACEME	
23		74313A 2	MAIN BEARING ASSEMBLY (.002	AR	WHEN ORDERING REPLACEME	
23		74313A 4	MAIN BEARING ASSEMBLY (.010	AR	WHEN ORDERING REPLACEME	
23		74313A 3	MAIN BEARING ASSEMBLY (.020	AR	WHEN ORDERING REPLACEME	
24		74314A 1	CENTER MAIN BEARING ASSY (1	WHEN ORDERING REPLACEME	
24		74314A 2	CENTER MAIN BEARING ASSY (AR	WHEN ORDERING REPLACEME	
24		74314A 4	CENTER MAIN BEARING ASSY (AR	WHEN ORDERING REPLACEME	
24		74314A 3	CENTER MAIN BEARING ASSY (AR	WHEN ORDERING REPLACEME	