



Parts List

Ref	Class	Part	Description	Qty	Comment	Footnote
1		77319	HEAT EXCHANGER(MCM)	1		
1		78165	HEAT EXCHANGER(INBOARD)	1		
2	22	32802	PIPE PLUG, HEAT EXCHANGER	2		
3	27	75450	GASKET, END CAP - HEAT EXC	2		
4		87924	PLATE, END CAP - HEAT EXCH.	2		
5	12	75451	WASHER, END CAP - HEAT EXC	2		
6	10	87192	SCREW, END CAP - HEAT EXC	2		
7		91907A	BRACKET ASSEMBLY, HEAT EXC	1		
8		86360	MOUNT, VIBRATION	3		
9		77223	PAD, MOUNTING BRACKET	2		
10	12	27025	WASHER, MOUNT ATTACHING	3		
11	11	49253	NUT, MOUNT ATTACHING STU	3		
12	16	31632	STUD, BRACKET ATTACHING	3		
13		77225	STRAP, BRACKET TO HEATER E	2		
14	10	77403	"U"BOLT, BRACKET TO HEAT EX	2		
15	11	26484	NUT, "U" BOLT ATTACHING	4		
16	32	88132	HOSE	1	FOR CORRECT HOSE, SEE MEF	
17	32	47642	HOSE	1	FOR CORRECT HOSE, SEE MEF	
17	32	47642	HOSE	1	FOR CORRECT HOSE, SEE MEF	
18	54	32523	CLAMP, HOSE ATTACHING	4		
19	32	77245	HOSE, THERMOSTAT HOUSING	1		
20	54	32780	CLAMP, HOSE ATTACHING	2		
21	32	77331	HOSE, THERMOSTAT HOUSING	1		
21	32	78109	HOSE, THERMOSTAT HOUSING	1		
22	54	32780	CLAMP, HOSE ATTACHING	2		
23	32	77332	HOSE, HEAT EXCHANGER TO EX	1		
23	32	78212	HOSE, HEAT EXCHANGER TO TF	1		
24	54	32780	CLAMP, HOUSE ATTACHING	2		
25	32	78189	HOSE, TRANSMISSION COOLER	1		
26	54	32780	CLAMP, HOSE ATTACHING (INBC	2		
27		63832	COOLER, TRANSMISSION OIL (IN	1		
28		76210	BRACKET, OIL COOLER (INBOARD	1		
29	54	76209	CLAMP, OIL COOLER (INBOARD)	1		
30	10	35585	SCREW, CLAMP TO BRACKET (IN	1		
31	13	26992	LOCKWASHER, CLAMP SCREW	1		
32	32	77457	HOSE, COOLANT RECOVERY BOT	2		
33	54	54428	CLAMP, HOSE ATTACHING	2		
34		91987A	BOTTLE, COOLANT RECOVERY	1		
35	36	91989	CAP, COOLANT RECOVERY BO	1		
36	10	20359	SCREW, BRACKET TO HEAD - PC	1		
37	12	26048	LOCKWASHER, BRACKET ATTAC	1		