



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		99438A 1	HEAT EXCHANGER	1		
2	22	32802	PIPE PLUG, HEAT EXCHANGER	2		
3	27	99960	GASKET, END CAP	2		
4		99961	PLATE, END CAP	2		
5	10	99962	SCREW, END CAP - HEAT EXC	2		
6		98618A 1	BRACKET ASSEMBLY, HEAT EXC	1		
7		41024	MOUNT, VIBRATION	6		
8		77223	PAD, MOUNTING BRACKET	2		
9	12	31263	WASHER, MOUNT STUD	3		
10	11	34933	NUT, MOUNT STUD	3		
11	16	41025	STUD, BRACKET	3		
12		98620	STRAP, BRACKET TO HEAT EXC	2		
13	10	98619A 1	"U" BOLT, HEAT EXCHANGER	2		
14	11	26484	NUT, "U" BOLT	4		
15	32	41497	HOSE, HEAT EXCHANGER TO VC	1		
20	32	99729	HOSE, EXHAUST MANIFOLD TO VC	1		