



Parts List					Qty	Comment	Footnote
Ref	Class	Part	Description				
-	1623	5356A 3	GEAR HOUSING ASSEMBLY, CO	1			
1	1623	5356A 4	GEAR HOUSING ASSEMBLY	1			
2	17	47972	PIN, SHIFT CRANK - GEAR HC	1			
3	16	46911	STUD, GEAR HOUSING TO D	1			
4	16	56298	STUD, GEAR HOUSING TO D	2			
5	26	45577	SEAL, GEAR HOUSING	1			
6	16	56297	STUD, WATER PUMP BASE A	1			
7	16	69501	STUD, WATER PUMP BASE A	2			
8	17	46912	PIN, DOWEL - GEAR HOUSIN	2			
9	31	35934	BEARING, ROLLER - DRIVE S	1			
10		66885	INSERT, WATER PICKUP (ST.	1			
10		66884	INSERT, WATER PICKUP (PT.	1			
11	10	67373	SCREW, INSERT TO GEAR H	1			
12	11	45812	NUT, INSERT SCREW	1			
13	45	55757A 1	DRIVE SHAFT ASSEMBLY	1			
14	17	30545	PIN, DRIVE SHAFT	1			
15	24	34576	SPRING, COMPRESSION - DF	1			
16	25	30613	"O" RING, UPPER - DRIVE SHA	1			
17	43	61027	GEAR, PINION - DRIVE SHAFT	1			
18	11	35921	NUT, PINION GEAR TO DRIVE	1			
19	15	57007A 1	SHIM, DRIVE SHAFT BEARING	AR			
20	31	53079A 1	TAPERED ROLLER BEARING A	1			
21	27	33146	GASKET, WATER PUMP BASE	1			
22	25	33145	"O" RING, WATER PUMP BASE	1			
23	46	57234A 1	WATER PUMP BASE ASSEMBL	1			
24	26	33144	OIL SEAL, WATER PUMP BAS	1			
25	26	31507	OIL SEAL, WATER PUMP BAS	1			
26	17	35973	DOWEL PIN, WATER PUMP E	2			
27	27	32433	GASKET, LOWER - WATER PUI	1			
28		32435	PLATE, FACE - WATER PUMP E	1			
29	27	32434	GASKET, UPPER - FACE PLATE	1			
30	46	64141A 1	WATER PUMP BODY ASSEMBL	1			
31		48752	INSERT, WATER PUMP BODY	1			
33	26	38970	SEAL, RUBBER - WATER INLET	1			
34	47	65960	IMPELLER, WATER PUMP	1			
35	28	56654	KEY, IMPELLER DRIVE	1			
36	10	30720	SCREW, WATER PUMP BODY	1			
37	12	36001	WASHER, WATER PUMP BODY	1			
38	11	35888	NUT, WATER PUMP BODY STL	2			
39	11	45592	NUT, WATER PUMP BODY STL	1			
40	12	28245	WASHER, WATER PUMP BODY	2			