



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		74436A 9	HYDRAULIC PUMP ASSEMBLY	1		
2	25	21720	"O" RING, HYDRAULIC PUMP T	4		
3	10	46318	SCREW, VENT - HYDRAULIC PI	1		
4	13	46317	LOCKWASHER, SEALING - VEN	1		
5	10	28634	SCREW, FILLER - HYDRAULIC I	1		
6	12	20260	WASHER, SEALING - HYDRAULI	1		
8		48077A 3	CONTROL VALVE ASSEMBLY	1		
-	25	21720	"O" RING, HYDRAULIC PUMP T	4		
9	22	38609	PLUG, CONTROL VALVE	1		
10	10	21091	SCREW, CONTROL VALVE TO H	4		
11	13	26392	LOCKWASHER, CONTROL VALVE	4		
12		46306A 1	BRACKET ASSEMBLY, HYDRAUL	1		
13	10	26066	SCREW, HYDRAULIC PUMP TC	3		
14	12	20546	WASHER, HYDRAULIC PUMP E	3		
15	11	35814	NUT, HYDRAULIC PUMP SCRE	3		
16	10	29877	SCREW, MOUNTING BRACKET T	1		
16	10	46765	SCREW, MOUNTING BRACKET T	2		
17	11	35814	NUT, MOUNTING BRACKET SCR	3		
18	84	74023	CONNECTOR AND HARNESS	1		
19		45559	TERMINAL BLOCK, HYDRAULIC	1		
20	10	35519	SCREW, TERMINAL BLOCK TO H	2		
21	10	62568	SCREW, HARNESS LEADS TO TE	2		
23	89	68258	STARTER SOLENOID	1		
24	13	26396	LOCKWASHER, STARTER SOLEI	2		
25	11	20645	NUT, STARTER SOLENOID TERM	2		
26	13	26393	LOCKWASHER, STARTER SOLEI	2		
27	11	68292	NUT, STARTER SOLENOID TERM	2		
28		46265	BOOT, RUBBER - STARTER SOLI	2		
29	10	69052	SCREW, STARTER SOLENOID TI	2		
30	13	26392	LOCKWASHER, STARTER SOLEI	2		
31	11	21825	NUT, STARTER SOLENOID SCRE	2		
32		74407	BRACKET, MOUNTING - STARTE	1		
33	10	21140	SCREW, MOUNTING BRACKET T	2		
34	13	26392	LOCKWASHER, MOUNTING BRA	2		
36	11	24656	NUT, MOUNTING BRACKET TO F	1		
--		55642A 7	CONTROL PANEL ASSEMBLY, CC	1		
37		55642A 1	PANEL ASSEMBLY, CONTROL	1		
38	16	55422	STUD, CONTROL PANEL TO BC	4		
39	12	24676	WASHER, CONTROL PANEL S1	4		
40	11	27164	NUT, CONTROL PANEL STUD	4		
41		55728A 1	SWITCH, PUSH BUTTON, COM	2		