



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		65550A 2	PLATE ASSEMBLY, TRANSOM	1		
2	10	37629	SCREW, TRANSOM PLATE PLAT	2		
3	10	37268	SCREW, TRANSOM PLATE TO G	2		
4	13	37272	LOCKWASHER, TRANSOM PLAT	4		
5	12	37271	WASHER, SQUARE - TRANSOM I	2		
6	10	36289	SCREW, TRANSOM PLATE TO EI	2		
7	12	38421	WASHER, TRANSOM PLATE SCF	2		
8	23	36290	SPACER, TRANSOM PLATE SCRI	2		
9	12	32834	WASHER, TRANSOM PLATE SCF	2		
10	13	33734A 1	LOCKWASHER, TRANSOM PLAT	2		
11	11	20220	NUT, TRANSOM PLATE TO ENGI	2		
12	12	21900	WASHER, GIMBAL HOUSING TO	2		
13	11	34087	NUT, GIMBAL HOUSING TO TRAI	2		
14	32	35015	TUBE, STEERING CABLE GUIDE	1		
15	11	37984	NUT, JAM - STEERING CABLE GL	2		
16	12	37985	WASHER, STEERING CABLE GUI	2		
17		73679A 2	CABLE ASSEMBLY, SHIFT ACTUA	1		
18		66069A 2	CORE WIRE, INNER SHIFT CAE	1		
19	32	38377	TUBE, SHIFT ACTUATING CA	1		
20		29880	GUIDE, SHIFT SCTUATING CABL	1		
21		20007	ANCHOR, SHIFT ACTUATING CAI	1		
22	10	20518	SCREW, SET - ANCHOR TO ACTI	2		
23		38473	WRAPPING, SHIFT ACTUATING (1		
24	32	34049	TUBE, NYLON - SHIFT ACTUATIN	1		
25		33981	SLIDE, SHIFT ACTUATING CABLE	1		
26	10	31700	SCREW, SET - SHIFT CABLE TO :	1		