



Parts List					
Ref	Class	Part	Description	Qty	Footnote
-	1623	5356A20	GEAR HOUSING ASSY, COMP. S	1	
1	1623	5356A 4	GEAR HOUSING ASSEMBLY	1	
2	17	37972	PIN, SHIFT CRANK-GEAR HOI	1	
3	16	46911	STUD, GEAR HOUSING TO D	1	
4	16	56298	STUD, GEAR HOUSING TO D	2	
5	26	45577	SEAL, GEAR HOUSING	1	15,18,17
6	16	56297	STUD, WATER PUMP BASE A	1	
7	16	69501	STUD, WATER PUMP BASE A	2	
8	17	85500	PIN, DOWEL-GEAR HOUSING	2	
9	31	92366	BEARING, ROLLER-DRIVE SF	1	22
10		66884	INSERT, WATER PICKUP (ST.	1	
10		66885	INSERT, WATER PICKUP (ST.	1	
11	10	76156	SCREW, INSERT TO GEAR H	1	
12	11	45812	NUT, INSERT SCREW	1	
13	45	55757A 1	DRIVE SHAFT ASSEMBLY	1	
14	17	30545	PIN, DRIVE SHAFT	1	
15	24	34576	SPRING, COMPRESSION-DRIF	1	
16	25	30613	"O" RING, UPPER-DRIVE SHAF	1	15,18
17	43	96084A 4	GEAR SET (INCLUDES PINION.	1	22
18	11	35921	NUT, PINION GEAR TO DRIVE	1	
19	15	57007A 1	SHIM, DRIVE SHAFT BEARING	AR	
20	31	53079A 1	TAPERED ROLLER BEARING A	1	
21	27	33146	GASKET, WATER PUMP BASE	1	15,18
22	25	33145	"O" RING, WATER PUMP BASE	1	15,18
23	46	57234A 1	WATER PUMP BASE ASSEMBL	1	
24	26	89238	OIL SEAL, WATER PUMP BAS	1	15
25	26	79884	OIL SEAL, WATER PUMP BAS	1	15
26	17	35973	DOWEL PIN, WATER PUMP E	2	
27	27	32433	GASKET, LOWER-WATER PUM	1	15,18
28	27	32435	PLATE, FACE-WATER PUMP B	1	18
29	27	32434	GASKET, UPPER-FACE PLATE	1	15,18
30	46	64141A 1	WATER PUMP BODY ASSEMBL	1	18
31		48752	INSERT, WATER PUMP BOD	1	18
33	26	38970	SEAL, RUBBER-WATER INLE	1	18,17
34	47	89984	IMPELLER, WATER PUMP	1	18
35	28	56654	PIN, IMPELLER DRIVE	1	18
36	10	30720	SCREW, WATER PUMP BODY	1	
37	12	36001	WASHER, WATER PUMP BOD	1	
38	11	35888	NUT, WATER PUMP BODY STL	2	
39	11	45592	NUT, WATER PUMP BODY STL	1	
40	12	28245	WASHER, WATER PUMP BOD	2	