



Parts List					
Ref	Class	Part	Description	Qty	Footnote
1		71527A 9	EXHAUST MANIFOLD ASSEMBLY	1	
2	22	33198A 1	PLUG,CORE (3/4-14)	3	
3	22	36382	PLUG,DRIAN (1/4-18)	1	
4	16	49545	STUD,MANIFOLD TO ELBOW (1/4-18)	2	
5	10	72094	SCREW,ELBOW TO MANIFOLD	2	
6	16	71494	STUD,EXHAUST MANIFOLD TO THERM	1	
7	16	77958	STUD,EXHAUST MANIFOLD TO THERM	1	
8	10	36355	SCREW,EXHAUST MANIFOLD TO THERM	6	
9	13	35048	LOCKWASHER,EXHAUST MANIFOLD ATTACH	8	
10	11	32219	NUT,EXHAUST MANIFOLD ATTACH	2	
11	27	68715	GASKET,EXHAUST MANIFOLD ATTACH	1	1
12		71943	END CAP,REAR	1	
13	27	48043	GASKET,END CAP 1	1	1
14	10	35386	SCREW,ENDCAP TO EXHAUST MANIFOLD	3	
14	10	20362	SCREW,END CAP TO EXHAUST MANIFOLD	1	
15	22	75188	FITTING,END CAP-BY-PASS HOSE	1	
16		74009	THERMOSTAT HOUSING	1	
17	22	32803	PLUG, THERMOSTAT HOUSING	1	
18		75669	SENDER,WATER TEMPERATURE	1	
19	27	48043	GASKET,THERMOSTAT HOUSING	1	1
20	10	74822	SCREW, THERMOSTAT HOUSING	4	
21	12	36533	WASHER,COPPER-THERMOSTAT HOUSING	4	
22		76270	THERMOSTAT	1	
23	27	74830	GASKET,THERMOSTAT HOUSING	1	1
24		74144A 2	ASSEMBLY	1	
25	22	74033	ELBOW, OVERFLOW	1	
26	22	58471	BASE,FILLER HOLE CAP	1	
27	25	45257	"O"RING, FILLER BASE	1	1
28	27	71614	GASKET, FILLER HOLE CAP	1	
29	36	55143	CAP,FILLER HOLE	1	
30	22	76170	ELBOW, RESERVOIR BY-PASS	1	
31	54	64235 1	CLAMP, HOSE TO VALVE COVER	1	
32	32	89713	HOSE,BY-PASS- RESERVOIR TO VALVE COVER	1	
33	54	75826	CLAMP,BY-PASS HOSE ATTACHMENT	2	
34	10	74826	SCREW, RESERVOIR TO THERM	2	
35	10	53016	SCREW,RESERVOIR TO THERM	2	
36	13	39107	LOCKWASHER,RESERVOIR ATTACHMENT	4	
37	12	53705	WASHER,RESERVOIR ATTACHMENT	4	
38		76325A 2	EXHAUST ELBOW ASSEMBLY	1	
39	22	33198A 1	PLUG, CORE (3/4-14)	4	
40	22	33198A 1	PLUG,CORE (1/8-22)	1	