



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		89775A 1	FLYWHEEL HOUSING ASSEMBLY	1		
2	23	46742	SPACER, RUBBER MOUNT	2		
3		33149	MOUNT RUBBER	2		
4	10	37612	SCREW, FLYWHEEL HOUSING A	6		
5	13	37459	LOCKWASHER, FLYWHEEL HOUSING	6		
6		72100	COVER, FLYWHEEL HOUSING	1		
7	10	26065	SCREW, COVER TO FLYWHEEL HOUSING	1		
8	10	47277	SCREW, COVER TO FLYWHEEL HOUSING	3		
9	11	29250	NUT, COVER TO FLYWHEEL HOUSING	4		
10	54	61001	CLAMP, SHIFT CABLE ATTACHING	1		
11		45915	TERMINAL BLOCK	1		
12	10	20189	SCREW, TERMINAL BLOCK TO FLYWHEEL HOUSING	1		
13	11	27164	NUT, TERMINAL BLOCK SCREW	1		
14	10	62568	SCREW, LEAD ATTACHING TERMINAL BLOCK	1		
15		72757	BRACKET, CIRCUIT BREAKER	1		
16	10	22524	SCREW, CIRCUIT BREAKER BRACKET	2		
17	11	56374	NUT, CIRCUIT BREAKER BRACKET	2		
18	88	78813	CIRCUIT BREAKER	1		
19	10	24637	SCREW, CIRCUIT BREAKER TO FLYWHEEL HOUSING	2		
20	11	46438	NUT, CIRCUIT BREAKER SCREW	2		
21	13	26996	LOCKWASHER, CIRCUIT BREAKER BRACKET	2		
22	11	68219	NUT, CIRCUIT BREAKER TERMINAL BLOCK	2		