



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		91025	ELBOW, LOWER - EXHAUST	1		
2		91023A 2	PIPE, INTERMEDIATE - EXHAUST	1		
3		72264A 1	BRACKET, SUPPORT - WATER	2		
4	10	37655	SCREW, SUPPORT BRACKET	4		
5	11	45812	NUT, SUPPORT BRACKET SCR	4		
6	10	54523	SCREW, ELBOW TO PIPE ATTAC	3		
7	13	39107	LOCKWASHER, ELBOW TO PIPE	3		
8	27	94136	GASKET, ELBOW TO PIPE	1		4
9	10	35787	SCREW, EXHAUST ELBOW TO G	3		
10	13	35048	LOCKWASHER, EXHAUST ELBO\	3		
11		45586	SHUTTER, WATER - EXHAUST E	1		
12		70981	BELLOWS, EXHAUST ELBOW TC	1		
13	54	31765	CLAMP, BELLOWS ATTACHING (I	2		
14	54	33683	CLAMP, BELLOWS ATTACHING (I	2		