



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		77319	HEAT EXCHANGER	1		
2	22	32802	PIPE PLUG, HEAT EXCHANGER	2		
3	27	75450	GASKET, END CAP - HEAT EXC	2		
4		87924	PLATE, END CAP - HEAT EXCH	2		
5	12	75451	WASHER, END CAP - HEAT EXC	2		
6	10	87192	SCREW, END CAP - HEAT EXC	2		
7		91907A 1	BRACKET, HEAT EXCHANGER M	1		
8		86360	MOUNT, VIBRATION ISOLATIO	3		
9	12	27025	WASHER, BRACKET STUD	3		
10	11	49253	NUT, BRACKET STUD	3		
11	16	31632	STUD, BRACKET ATTACHING	3		
12		77223	PAD, MOUNTING BRACKET	2		
13		77225	STRAP, BRACKET TO HEAT EXC	2		
14	10	77403	"U" BOLT, BRACKET TO HEAT E	2		
15	11	26484	NUT, "U" BOLT ATTACHING	4		
16	32	47642	HOSE	1	FOR CORRECT HOSE, SEE ME	
18	32	88132	HOSE	1	FOR CORRECT HOSE, SEE ME	
19	54	32523	CLAMP, HOSE ATTACHING	4		
20	32	89654	HOSE, HEAT EXCHANGER TO M	1		
21	54	32780	CLAMP, HOSE ATTACHING	1		
22	54	32781	CLAMP, HOSE ATTACHING	1		
23	32	77245	HOSE, HEAT EXCHANGER TO TH	1		
24	54	32780	CLAMP, HOSE ATTACHING	2		
25	32	77332	HOSE, HEAT EXCHANGER TO EX	1		
27	54	32780	CLAMP, HOSE ATTACHING WITH	2		
25	32	89873	HOSE, HEAT EXCHANGER TO P/	1		
26	32	89874	HOSE, P/S OIL COOLER TO EXH	1		
27	54	32780	CLAMP, HOSE ATTACHING WITH	4		
28		90740	COOLER, POWER STEERING W	1		
29		76210	BRACKET, POWER STEERING CI	1		
30	54	76209	CLAMP, POWER STEERING COO	1		
31	10	35585	SCREW, CLAMP ATTACHING WI	1		
32	13	26992	LOCKWASHER, CLAMP ATTACHI	1		