



| Parts List | | | | | | |
|------------|-------|----------|----------------------------|-----|---------|----------|
| Ref | Class | Part | Description | Qty | Comment | Footnote |
| 1 | | 99438A 1 | HEAT EXCHANGER | 1 | | |
| 2 | 22 | 32802 | PIPE PLUG, HEAT EXCHANGE | 2 | | |
| 3 | 27 | 99960 | GASKET, END CAP | 2 | | |
| 4 | | 99961 | PLATE, END CAP | 2 | | |
| 5 | 10 | 99962 | SCREW, END CAP - HEAT EXC | 2 | | |
| 6 | | 98618A 1 | BRACKET ASSEMBLY, HEAT EXC | 1 | | |
| 7 | | 41024 | MOUNT, VIBRATION | 6 | | |
| 8 | | 77223 | PAD, MOUNTING BRACKET | 2 | | |
| 9 | 12 | 31263 | WASHER, MOUNT STUD | 3 | | |
| 10 | 11 | 34933 | NUT, MOUNT STUD | 3 | | |
| 11 | 16 | 41025 | STUD, BRACKET | 3 | | |
| 12 | | 98620 | STRAP, BRACKET TO HEAT EXC | 2 | | |
| 13 | 10 | 98619A 1 | "U" BOLT, HEAT EXCHANGER | 2 | | |
| 14 | 11 | 26484 | NUT, "U" BOLT | 4 | | |
| 15 | 32 | 41497 | HOSE, HEAT EXCHANGER TO VC | 1 | | |
| 20 | 32 | 99729 | HOSE, EXHAUST MANIFOLD TO | 1 | | |