



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		88475A	5 HYDRAULIC PUMP ASSEMBLY (F	1		
1		93247A	4 HYDRAULIC PUMP ASSEMBLY (F	1		
1		79271A	4 HYDRAULIC PUMP ASSEMBLY (N	1		
2	25	48171	"O" RING, HYDRAULIC PUMP T	4		
3		48077A	3 CONTROL VALVE ASSEMBLY	1	NOT USED WITH B-93247A4	
-	25	48171	"O" RING, PUMP TO VALVE (SE	4	NOT USED WITH B-93247A4	
4	22	38609	PLUG, CONTROL VALVE	1	NOT USED WITH B-93247A4	
5	10	69086	SCREW, CONTROL VALVE TO H	4	NOT USED WITH B-93247A4	
6	13	26992	LOCKWASHER, CONTROL VALVE	4	NOT USED WITH B-93247A4	
7		94225A	1 BRACKET ASSEMBLY, HYDRAUL	1		
8	10	26066	SCREW, HYDRAULIC PUMP TC	4		
9	12	20546	WASHER, HYDRAULIC PUMP E	4		
10	11	35814	NUT, HYDRAULIC PUMP SCRE	4		
11	16	87372	STUD, MOUNTING BRACKET TO	3		
12	11	35814	NUT, MOUNTING BRACKET STU	3		
13		88893A	4 BRACKET ASSEMBLY, FLOOR M	1		
14		58491	BUMPER, RUBBER-PUMP MC	2		
15	10	59784	SCREW, PUMP MOUNTING BRAI	6		
16	12	29245	WASHER, PUMP MOUNTING BR	6		
17		45377	BRACKET, TRANSOM MOUNTIN	2		
18	10	24234	SCREW, HYDRAULIC PUMP TO	4		
19	13	39107	LOCKWASHER, HYDRAULIC PUK	4		
20	11	21908	NUT, HYDRAULIC PUMP SCREW	4		
21	10	68298	SCREW, PUMP MOUNTING BRAC	2		
22	11	35304	NUT, PUMP MOUNTING BRACKE	2		