



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		71317A 8	HYDRAULIC PUMP ASSEMBLY, F	1		
1		90507A 1	HYDRAULIC PUMP ASSEMBLY, F	1		
2		38333	CAP, FILLER-HYDRAULIC PUMF	1		
2A		73873	PULLEY, HYDRAULIC PUMP	1		
3	32	65929	HOSE, RETURN-VALVE TO OIL C	1		
3A	32	65231	HOSE, RETURN-OIL COLLER TO	1		
4	54	35830	CLAMP, RETURN HOSE TO HYDI	3		
5	32	55116	HOSE, PRESSURE-POWER STEE	1		
5	32	90494	HOSE, PRESSURE-POWER STEE	1		
6		61990	STA-STRAP, HYDRAULIC HOSES	1		
7		57969	CYLINDER, BOOSTER (B-25-5822	1		
8		26059	CAP, RUBBER-BOOSTER CYLINC	1		
9	32	57633	TUBE, EXTENDING-POWER STE	1		
10	32	57634	TUBE, RETRACTING-POWER ST	1		
11		52779A 2	VALVE, POWER STEERING (B-25	1		
11A	22	67305	FITTING, GREASE-POWER STEE	1		
12	16	55109	STUD, ADAPTOR-POWER STEEF	1		
13	10	37612	SCREW, CLAMPING (1 1/4")	1		
14	13	37459	LOCKWASHER, CLAMPING SCRE	1		
15	23	60773	SLEEVE, ADJUSTING-CABLE GUI	1		
15A	23	60652	SLEEVE, ADJUSTING-CABLE GUI	1		
16		55110	ADAPTOR, CABLE GUIDE TUBE (	1		
17	13	20897	LOCKWASHER, DUAL ADAPTOR	1		
18	11	55111	NUT, DUAL ADAPTOR TO POWE	1		
19	32	55112	TUBE, CABLE GUIDE	1		
20	12	37985	WASHER, CABLE GUIDE TUBE	2		
21	11	37984	NUT, CABLE GUIDE TUBE	2		
22		64414	GUIDE, CABLE GUIDE TUBE	1		
23		57286	BRACKET, MOUNTING-TRANSOM	1		
24	10	31832	SCREW, MOUNTING BRACKET T	2		
25	13	31848	LOCKWASHER, MOUNTING BRA	2		
26	10	57968	SCREW, ADJUSTING-MOUNTING	1		
27	13	37459	LOCKWASHER, ADJUSTING SCR	1		
28	11	24883	NUT, ADJUSTING SCREW	1		
29	12	20959	WASHER, VALVE ADAPTOR STU	1		
30	11	28040	NUT, VALVE ADAPTOR STUD	1		
31	11	32882	NUT, MOUNTING TUBE	1		
32		57971	TUBE, MOUNTING-BOOSTER RO	1		
32A	24	78498	SPRING, TORSION-MOUNTING T	1		
33	11	55983	NUT, JAM-MOUNTING TUBE	1		
34		57970	EXTENSION, CYLINDER BOOSTE	1		