



Parts List					
Ref	Class	Part	Description	Qty	Footnote
1		94985A	FLYWHEEL HOUSING ASSEMBLY	1	
2	23	99322	SPACER, RUBBER MOUNT	2	
3		99297A	MOUNT, RUBBER	2	
4	10	37612	SCREW, FLYWHEEL HOUSING	5	
5	13	35047	LOCKWASHER, FLYWHEEL HOUSING	5	
6	16	64066	STUD, FLYWHEEL HOUSING	1	
7	13	35047	LOCKWASHER, FLYWHEEL HOUSING	1	
8	11	32219	NUT, FLYWHEEL HOUSING STUD	1	
9	84	62826A	WIRE, FLYWHEEL HOUSING STU	1	
10		95026A	COVER, FLYWHEEL HOUSING	1	
11	27	94976	GASKET, FLYWHEEL HOUSING	1	4
12	10	26065	SCREW, COVER TO FLYWHEEL HOUSING	4	
13	11	29250	NUT, COVER TO FLYWHEEL HOUSING	4	
14	54	61001	CLAMP, SHIFT CABLE ATTACHING	1	
15		45915	TERMINAL BLOCK	1	
16	10	20189	SCREW, TERMINAL BLOCK TO HOUSING	1	
17	11	27164	NUT, TRMINAL BLOCK SCREW	1	
18	10	62568	SCREW, LEAD ATTACHING TO TERMINAL BLOCK	1	
19		43182	BRACKET, CIRCUIT BREAKER	1	
20	10	22524	SCREW, CIRCUIT BREAKER BRACKET	2	
21	11	56374	NUT, CIRCUIT BREAKER BRACKET	2	
22	88	78813	CIRCUIT BREAKER (50 AMP.)	1	
23	10	45862	SCREW, CIRCUIT BREAKER TO HOUSING	2	
24	11	46438	NUT, CIRCUIT BREAKER SCREW	2	
25	13	26996	LOCKWASHER, CIRCUIT BREAKER SCREW	2	
26	11	68219	NUT, CIRCUIT BREAKER TERMINAL BLOCK	2	
27	10	85486	SCREW, GROUNG WIRE TO TERMINAL BLOCK	1	