



MC0044

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	50	97499A 2	STARTER MOTOR ASSEMBLY	1		
2	16	97256	STUD, STARTER MOTOR TO CYL	2		
3	11	34933	NUT, STARTER MOTOR STUD	2		
4	11	29031	NUT, STARTER MOTOR STUD (1	2		
5	13	26995	LOCKWASHER, STARTER MOT	1		
6	11	26419	NUT, STARTER MOTOR TERMIN	1		
7		97259A 1	BRACKET, STARTER MOTOR TO	1		
8	10	27165	SCREW, BRACKET TO CYLINDE	2		
9	12	34931	WASHER, BRACKET SCREW	2		
10	13	35048	LOCKWASHER, BRACKET SCRE	2		
11		65057A 1	STARTER SOLENOID	1		
12	10	28635	SCREW, SOLENOID TO CYLINDE	2		
13	13	26992	LOCKWASHER, SOLENOID SCRE	2		
14		26901	BUMP, SOLENOID	1		
15	13	26996	LOCKWASHER, SOLENOID TERM	2		
16	11	68219	NUT, SOLENOID TERMINAL (#10	2		
17	13	26993	LOCKWASHER, SOLENOID TERM	2		
18	11	20083	NUT, SOLENOID TERMINAL (5/11	2		
19	84	98269A 3	WIRING HARNESS (USE WITH 9)	1		
19	84	98269A 5	WIRING HARNESS (USE WITH 9)	1		
20		26079	PLATE, HARNESS ATTACHING	1		
21	10	34696	SCREW, PALTE TO BRACKET (3/	4		
22		90806	SENDING UNIT, OIL PRESSURE	1		
23	13	26996	LOCKWASHER, SENDING UNIT	1		
24	11	68219	NUT, SENDING UNIT TERMINA	1		
25		99502A 9	VOLTAGE REGULATOR	1		
26	10	98255	SCREW, VOLTAGE REGULATOR	2		
27	13	26992	LOCKWASHER, VOLTAGE REGU	2		
28	10	34354	SCREW, VOLTAGE REGULATOR	1		
29	13	58643	LOCKWASHER, VOLTAGE REGU	1		
30	11	68219	NUT, VOLTAGE REGULATORR T	5		
31	54	64235 1	"J" CLIP, WIRING HARNESS TO	1		
32	10	98253	SCREW, "J" CLIP TO MANIFOLD	1		
33	13	26992	LOCKWASSHER, "J" CLIP SCREW	1		
34	88	79023A91	FUSE ASSEMBLY (90 AMP.)	1	NOT USED ON LATER ENGINES	
35	12	96457	WASHERN FUSE TERMINAL	1	NOT USED ON LATER ENGINES	
36	13	26992	LOCKWASHER, FUSE TERMINAL	1	NOT USED ON LATER ENGINES	
37	11	21825	NUT, FUSE TERMINAL	1	NOT USED ON LATER ENGINES	
38	84	94227A 2	RESISTANCE WIRE KIT (TO REF	1		