



4807

Parts List

Ref	Class	Part	Description	Qty	Comment	Footnote
-		14336A17	PUMP ASSEMBLY, Trim	1		
1		14336A20	PUMP/MOTOR ASSEMBLY	1		
2	84	79138A 9	CABLE ASSEMBLY, Black	1	(Negative - Battery)	
3	10	90285	SCREW, (.312-18 x .625)	1		
4	12	56720	WASHER, (.330 x .750 x .060)	1		
5	11	68292	NUT, (.312-18)	1		
6	84	79147A 3	HARNESS ASSEMBLY	1		
7	88	79091	FUSE, 20 Ampere	1		
8	84	95084A 2	CABLE ASSEMBLY	1		
9		88075	RETAINER	1		
10	89	96158T	SOLENOID	2		
11	10	41508	SCREW, (.250-20 x .500)	4		
12	11	26419	NUT, (#8-32)	4		
13	13	26992	LOCKWASHER, (.250)	4		
14	11	94330	NUT, (.250-20)	4		
15	85	861680	INSULATOR	1		
16	10	48409	SCREW, (#10-16 x .625)	1		
17		94275	LINK, Connector	1		
18	84	86322A15	CABLE ASSEMBLY, (5.50 Inches)	1		
19	84	79139A12	CABLE ASSEMBLY, Red	1	(Positive-Battery)	
20	88	79023A10	FUSE ASSEMBLY, 110 Ampere	1		
21	12	96457	WASHER	1		
22	11	21825	NUT, (.250-28)	1		
23		862548A 1	BRACKET KIT, Trim Pump	1		
24	10	59784	SCREW, (.250-10 x 1.00)	4		
25	12	29245	WASHER, (.281 x .500 x .060)	4		
26	10	35386	SCREW, (.312-18 x 1.00)	4		
27	13	39107	LOCKWASHER, (.312)	4		
28	84	86322A24	CABLE ASSEMBLY, (4.00 Inches)	1		