



Parts List

Ref	Class	Part	Description	Qty	Comment	Footnote
1		860234A	HEAT EXCHANGER	1		
NS		814875	COVER-END	2		
NS	27	803644	GASKET-END COVER	2		
NS	10	814877	BOLT	2		
NS	25	814878	O-RING	2		
NS	36	814879	CAP-PRESSURE	1		
2		860326A	BRACKET ASSEMBLY-HEAT EXC	1		
3		18431	PAD	2		
4	54	815504388	CLAMP	2		
5		71587A10	RECOVERY KIT-COOLANT	1	SOLD AS A COMPLETE KIT ONL	
6		71587A11	BOTTLE-COOLANT RECOVERY	1		
7		72058	CAP	1		
8		861198A	HOUSING-THERMOSTAT	1		
9	25	807134	SEAL	1		2
10	23	52020	SLEEVE-HOSE	1		
11	22	32803	PLUG-PIPE (3/8 IN.)	1		
12		99155	THERMOSTAT	1		
13		807075A	COVER-THERMOSTAT	1		
14	10	29198	SCREW & LOCKWASHER (5/16-1	2		
15	10	58640	SCREW (3/8-16 X 1-1/4 IN.)	2		
16	22	32802	PLUG-PIPE (1/8 IN.)	1		
17	27	53045	GASKET-THERMOSTAT HOUSIN	2		2
18	32	42850	HOSE-HEAT EXCHANGER TO HE	1		
19	32	861057	HOSE-HEAT EXCHANGER TO EX	1	(STARBOARD)	
20	32	860421	HOSE-HEAT EXCHANGER TO EX	1	(PORT)	
21	54	815504220	CLAMP	6		
22	32	860485	HOSE-THERMOSTAT BY-PASS	1		
23	32	860419	HOSE-THERMOSTAT HOUSING	1		
24	32	860332	HOSE-HEAT EXCHANGER TO FU	1		
25	54	815504222	CLAMP	6		
26	32	861059	HOSE-WATER PUMP TO HEAT E	1		
27	54	815504232	CLAMP	2		
28	32	860482	HOSE-WATER PUMP TO INTAKE	1		
29	54	815504212	CLAMP	2		
30	22	860346	ELBOW-90 DEG. (3/4 IN.)	1		
31	22	808042	ELBOW-90 DEG. (1/2 IN.)	1		
32	32	860089	HOSE-FUEL COOLER TO POWEF	1		
33	32	808044	HOSE-POWER STEERING COOLF	1		
34		32877	PLUG-TRANSOM PLATE WATER	1		
NS	19	807992	COVER-HOSE CLAMP END	AR		
27		861246A98	GASKET-SET ENGINE OVERHAUL	1		