



19732

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-	50	76965A 3	STARTER MOTOR, L.H. ROTATIO	1		
-	50	79604A 3	STARTED MOTOR ASSEMBLY, R	1		
1		79206	HOUSING, DRIVE END	1		
2	23	33369	BUSHING, DRIVE END HOUS	1		
3		33292	COLLAR, THRUST	1		
4	53	33290	RING, Retaining, PINION STOP	1		
5		33291	COLLAR, PINION STOP	1		
6		68608	DRIVE, CLUTCH (L.H. ROTATIO	1		
6		68609	DRIVE ASSEMBLY, CLUTCH (R.	1		
7		79396	PLATE, BEARING	1		
8	23	71694	BUSHING, BEARING PLATE	1		
9	12	68614	WASHER, BEARING PLATE	1		
10	10	75659	SCREW, BEARING PLATE	2		
11		68606	ARMATURE (L.H. ROTATION)	1		
11		68607	ARMATURE (R.H. ROTATION)	1		
12		N.S.S.	Not Sold Seperate, SHOE, POLE	4		
13		N.S.S.	Not Sold Seperate, SCREW, POL	4		
14		N.S.S.	Not Sold Seperate, GROMMET, F	1		
15		N.S.S.	Not Sold Seperate, FIELD COIL (L	1		
15		75664	FIELD COIL ASSEMBLY (R.H. Ri	1		
16	12	33258	WASHER, Leather, LEATHER - (1		
17		79211	FRAME, COMMUTATOR END - (1		
18		N.S.S.	Not Sold Seperate, BOLT, THRU	1		
18		N.S.S.	Not Sold Seperate, BOLT, THRU	1		
19		33284	HOLDER, INSULATED - FIELD F	2		
20		33283	HOLDER, FIELD FRAME BRUSH	2		
21		33270	BRUSH, FIELD FRAME	4		
22		N.S.S.	Not Sold Seperate, SCREW-BRU	2		
22		N.S.S.	Not Sold Seperate, SCREW-BRU	2		
23	16	33294	SUPPORT PACKAGE, GROUND	2		
24	24	33285	SPRING, FIELD FRAME BRUSH	4		
25		N.S.S.	Not Sold Seperate, DOWEL PIN	1		
26		33297	LEVER, SHIFT	1		
27		N.S.S.	Not Sold Seperate, STUD, SHIFT	1		
28	12	68615	WASHER, SHIFT LEVER STUD	1		
29	11	26484	NUT, (.312-18), SHIFT LEVER S	1		
30		33317	PLUNGER, SHIFT LEVER	1		
31	17	79207	PIN, PLUNGER TO SHIFT LEVE	1		
32	24	46889	SPRING, PLUNGER RETURN	1		
33		N.S.S.	Not Sold Seperate, SCREW, SOL	2		
34		12027	SOLENOID SWITCH (4.14") LO	1		