



9801

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		884794A	DISTRIBUTOR ASSEMBLY	1		
2		884792	CAP, Distributor	1		
3	10	884786	SCREW	2		
4		884790	ROTOR	1		
5	10	884788	SCREW	2		
6		NSS	NOT SOLD SEPARATE, SENSO	1		
7		NSS	NOT SOLD SEPARATE, SCREW	2		
8	43	884789	GEAR ASSEMBLY	1		
9	54	88731	CLAMP	1		
10	10	40011149	SCREW, (M8 x 25)	1		
11	27	34486	GASKET	1		
12	84	863656A	CABLE KIT, Ignition (Spark Plugs a	1		
13	84	863657A	CABLE, Coil Wire Assembly	1		
14	33	884019	SPARK PLUG	8	(AC 41-932)	
15		54676	RETAINER, Two Wire	2		
16		32783	RETAINER, Three Wire	2		
17		32784	RETAINER, Four Wire	2		
18	392	863704T	COIL, Ignition	1		
19	10	65746	SCREW AND LOCKWASHER, (.25	2		
20		863663	BRACKET, Coil	1		
21	10	98261	SCREW, (.375-16 x .750)	2		
22	16	90096A	STUD ASSEMBLY, (#10-32 x Spec	2		
23	54	72821	RETAINER	2		
-	27	861246A98	GASKET SET, Engine Overhaul	1		