



Parts List

Ref	Class	Part	Description	Qty	Comment	Footnote
1	84	98423A14	WIRING HARNESS	1	(200 - 5.0L)	
1	84	98423A13	WIRING HARNESS	1	(230/260/5.0LX/5.7L/350 MAGN	
1	84	98423A18	WIRING HARNESS	1	(5.0L BRAVO)	
1	84	98423A15	WIRING HARNESS	1	(5.7L BRAVO)	
2		26079	PLATE	1	METAL	
3	10	34696	SCREW	4	METAL	
2		26079A 2	PLATE	1	PLASTIC	
3	10	15001	SCREW	4	PLASTIC	
4		98493A 2	BRACKET	1		
5	10	65746	SCREW	3	(CAST IRON EXHAUST MANIFOL	
7		15899A	IGN. MODULE	1	(200/230 - 5.0L/LX)	
7		814295A 1	IGN. MODULE	1	(260 - 5.7L ALPHA) (S/N 0F27349	
7		821125A 1	IGN. MODULE	1	(260 - 5.7L ALPHA) (S/N 0F27349	
7		814295A 1	IGN. MODULE	1	(5.7L BRAVO) (S/N 0D617327 & E	
7		821125A 1	IGN. MODULE	1	(5.7L BRAVO) (S/N 0D617328 & A	
7		814295A 1	IGN. MODULE	1	(350 MAGNUM) (S/N 0D617327 & E	
7		821125A 1	IGN. MODULE	1	(350 MAGNUM) (S/N D617328 & .	
8	84	15275A 1	HARNESS ASSEMBLY	1		
9	10	76630	SCREW	3	CAST IRON EXHAUST MANIFOL	
10	13	26992	LOCKWASHER	3	CAST IRON EXHAUST MANIFOL	
10A	11	64015	NUT	6	(STAINLESS STEEL EXHAUST M	
11	23	92152	SPACER	3		
12		97258A 1	WATER TEMPERATURE SENDEI	1		
12		97257A 1	WATER TEMPERATURE SENDEI	1		
12		49734A 1	WATER TEMPERATURE SENDEI	OPT.		9
13		815425	OIL PRESSURE SENDER	1		
13		37293	OIL PRESSURE SENDER (DUAL)	OPT.		9
14	13	26996	LOCKWASHER	2		
15	11	68219	NUT	2		
16	22	46932	ELBOW	1		
17	22	42554	NIPPLE	1		
18		41170T	BRACKET	1		
19	10	37612	SCREW	1		
20	13	35048	LOCKWASHER	2		
21	54	78945	CLAMP	1		
22	10	26486	SCREW	1		
24	23	15895	SPACER (1-1/2 IN.)	1		
24	23	91034	SPACER (1/2 IN.)	1		
25	88	11178	CIRCUIT BREAKER (50 AMP)	1		
26	13	26996	LOCKWASHER	2		
27	11	68219	NUT	2		