



14006

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	84	861515A	2 HARNESS, Wiring	1	(5.0L Alpha) (Mando Alternator)	
1	84	862163T	1 HARNESS, Wiring	1	(5.0L Alpha) (Delco Alternator) SN:	
1	84	862163T02	1 HARNESS, Wiring	1	(5.0L Alpha) (Delco Alternator) SN:	
1	84	861236A	2 HARNESS, Wiring	1	(5.0L Bravo) (Mando Alternator)	
1	84	862575T	1 HARNESS, Wiring	1	(5.0L Bravo) (Delco Alternator) SN	
1	84	862575T02	1 HARNESS, Wiring	1	(5.0L Bravo) (Delco Alternator) SN	
1	84	861236A	2 HARNESS, Wiring	1	(5.7L Alpha/Bravo) (Mando Alternat	
1	84	862575T	1 HARNESS, Wiring	1	(5.7L Alpha/Bravo) (Delco Alternat	
1	84	862575T02	1 HARNESS, Wiring	1	(5.7L Alpha/Bravo) (Delco Alternat	
2		26079A	2 PLATE KIT, Wire Harness Mount	1		
3	10	15001	3 SCREW, (#8-16 x .875)	3		
4		807453T	1 BRACKET, Harness Mounting/Lifti	1		
5	10	98261	2 SCREW, (.375-16 x .750)	2		
6	22	805328	1 ELBOW, (90 Degree - .125) (90 De	1		
6	22	32974	1 FITTING, (.125-27) Adaptor, Straig	1		
7	87	815425T	1 SENDER ASSEMBLY	1		
7		37293T	1 SENDER ASSEMBLY	OPT	(Dual Station)	5
8		806490T	1 SENDER	1		
8		49734	1 SENDER	OPT	(Dual Station)	5
9	13	26996	2 LOCKWASHER, (#10)	2		
10	11	68219	2 NUT, (#10-32)	2		
11	87	864252A01	1 SWITCH, Oil Pressure	1	(5.0L) SN# 0M330622 & Below	
11	87	864252	1 SWITCH, Oil Pressure	1	(5.0L) SN# 0M330623 & Up	
11	87	864252A01	1 SWITCH, Oil Pressure	1	(5.7L) SN# 0M331443 & Below	
11	87	864252	1 SWITCH, Oil Pressure	1	(5.7L) SN# 0M331444 & Up	
12	22	28624	1 FITTING, T	1		
13	87	805605A	1 SWITCH ASSEMBLY	1		
14	13	26996	1 LOCKWASHER, (#10)	1		
15	11	68219	1 NUT, (#10-32)	1		
16		805218T	1 SENSOR	1		
17		816492A	6 ALARM KIT	1		
18	22	805059	1 FITTING	1		
19		805368T	1 BRACKET, Electrical	1		
20	88	79023A56	1 FUSE ASSEMBLY, (55 Ampere)	1		
20	88	79023A91	1 FUSE ASSEMBLY, (90 Ampere)	1		
21	11	21825	1 NUT, (.250-28)	1		
22	88	806950	1 CIRCUIT BREAKER, (50 Ampere)	1		
23	10	68513	2 SCREW, (#10-32 x .375)	2		
24	13	26996	2 LOCKWASHER, (#10)	2		
25	10	57583	2 SCREW, (#8-32 x .375)	2		
26	88	96188T	1 SOLENOID	1		