


84-806656A6

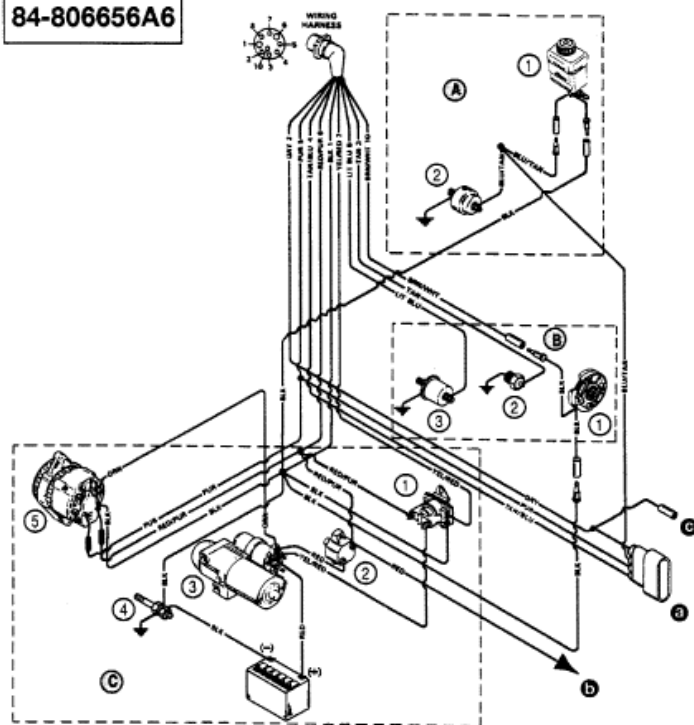

**A - Audio Warning System**  
 1 - Drive Unit Oil Level  
 2 - Oil Pressure Switch

**B - Instrumentation System**  
 1 - Tirm Sender  
 2 - Water Temperature Sender  
 3 - Oil Pressure Sender

**C - Charging and Starting System**  
 1 - Starter Slave Solenoid  
 2 - Circuit Breaker  
 3 - Starter  
 4 - Ground Stud  
 5 - Alternator

**A - Charging and Starting Circuit**  
**B - Audio Warning/Power Reduction Circuit**  
**C - Instrumentation Senders**

a - Harness Connector to EFI System Harness  
 b - Positive (+) Power Wire to EFI System Harness  
 c - Auxiliary Tachometer Lead

Parts List

Ref	Class	Part	Description	Qty	Comment	Footnote