



Parts List					
Ref	Class	Part	Description	Qty	Footnote
1		97401A 8	FUEL PUMP	1	
2	27	34213	GASKET	1	2
3	10	34354	SCREW (1-1/2")	2	
4	13	35048	LOCKWASHER	2	
5		35373	MOUNTING PLATE	1	
6	27	34898	GASKET	1	2
7	10	35366	SCREW	2	
8		821150	PUSH ROD	1	
9		89876A 3	BASE ASSEMBLY	1	
9A	22	816133 1	FITTING	1	
10	22	32561	PIPE PLUG	3	
11		88641	MOUNTING BRACKET	1	
13	11	35814	NUT	2	
14	35	807172	FUEL FILTER/WATER SEPARATI	1	
15	22	33821	CONNECTOR	3	
16	32	97326T	FUEL LINE	1	
17	32	806641T	FUEL LINE	1	
18	32	73815 67	HOSE	1	
19		805367T	BRACKET	1	
20	10	37612	SCREW	1	
21	13	35048	LOCKWASHER	1	
22	23	91034	SPACER	1	
23	10	26486	SCREW	1	
24	13	35048	LOCKWASHER	1	
25	12	20553	WASHER	1	
26	23	15895	SPACER	1	