



12414

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	84	862575T04	HARNESS, Wiring	1	(5.0L Bravo/5.7L Alpha and Bravo)	
1	84	862163T04	HARNESS, Wiring	1	(5.0L Alpha)	
2		26079A 2	PLATE KIT, Wire Harness Mount	1		
3	10	15001	SCREW, (#8-16 x .875)	3		
4		807453T	BRACKET, Harness Mounting/Liftir	1		
5	10	98261	SCREW, (.375-16 x .750)	2		
6	22	805328 1	ELBOW, (90 Degree - .125)	1		
6		861516	BRACKET	1		
7		861459T 1	ICM MODULE	1	(5.0L Alpha)	
7		861460T 1	ICM MODULE	1	(5.0L Bravo)	
7		861253T 1	ICM MODULE	1	(5.7L Alpha)	
7		861254T 1	ICM MODULE	1	(5.7L Bravo)	
8		861517	BRACKET	1	(5.0L Bravo)(5.7L Alpha/Bravo)	
9		806611T	MODULE, Knock Control	1	(5.0L Bravo)(5.7L Alpha/Bravo)	
10	10	41408	SCREW, (#10-32 x 1.50)	2	(5.0L Bravo)(5.7L Alpha/Bravo)	
11	10	861520	SCREW, (#10-32 x .50)	2	(5.0 L Alpha)	
12	12	89302	WASHER, (.203 x .406 x .040)	2	(5.0 L Alpha)	
13	10	24323	SET SCREW, (.250-20 x 1.25) (.25)	3		
14	12	35462	WASHER, (.2656 x .625 x .0625)	3		
15	11	64015	NUT, (.250-20)	3		
16		805368T	BRACKET, Electrical	1		
17	88	806950	CIRCUIT BREAKER, (50 Ampere)	1		
18	10	68513	SCREW, (#10-32 x .375)	2		
19	13	26996	LOCKWASHER, (#10)	2		
20	10	57583	SCREW, (#8-32 x .375)	2		
21	89	96158T	SOLENOID	1		
22	10	805564	SCREW, (.250-20 x .750)	3	(Alpha)	
22	10	805564	SCREW, (.250-20 x .750)	2	(Bravo)	
23	13	26992	LOCKWASHER, (.250)	2		
24	11	94330	NUT, (.250-20)	2		
25	13	26995	LOCKWASHER, (#8)	2		
26	11	26419	NUT, (#8-32)	2		
27	85	97861	INSULATOR	1		
28	16	805459	STUD, Mercathode Mounting	1	(Bravo)	
29	84	95084A 9	CABLE ASSEMBLY, (91.00 Inches)	1	(Bravo)	
30	88	79091	FUSE, (20 Ampere)	1	(Bravo)	
31	84	95084A 10	CABLE ASSEMBLY, (5.00 Inches)	1	(Bravo)	
32		816492A 6	ALARM KIT	1		
33	22	32974	FITTING, (.125-27) Adaptor	1		
34	87	805605A 1	SWITCH ASSEMBLY	1		
35	12	26995	LOCKWASHER, (#10)	2		