



DISTRIBUTOR AND IGNITION COMPONENTS

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		805185A36	DISTRIBUTOR ASSEMBLY	1		
2		805759A 5	CAP-DISTRIBUTOR	1		
3	27	805760	GASKET	1		
4	10	90926	SCREW (#10-32 X 13/16 IN.)	4		
5		13524T 1	ROTOR/SENSOR WHEEL	1		
6	87	861780A 2	SENSOR ASSEMBLY	1		
7	10	66686	SCREW (#10-32 X 1 IN.)	1		
7	10	72202	SCREW (#10-32 X 1-1/4 IN.)	1		
8	43	818807	DRIVE GEAR	1		
9	17	47617	PIN	1		
10	23	90915	BUSHING	2		
11	12	90931	WASHER	1		
12	27	34486 3	GASKET	1		3
13		52185	CLAMP	1		
14	10	806681	SCREW (3/8-16 X 7/8 IN.)	1		
15	84	816608Q80	CABLE KIT-IGNITION (SPARK PLL	1		
16	33	816336	SPARK PLUG	8		
17		54676	RETAINER (2 WIRE)	2	(Use Where Applicable)	
18		32783	RETAINER (3 WIRE)	2	(Use Where Applicable)	
19		32784	RETAINER (4 WIRE)	2	(Use Where Applicable)	
20	392	805570A 2	COIL-IGNITION	1		
21		65970T 1	BRACKET-COIL	1		
22	10	41408	SCREW (#10-32 X 1-1/2 IN.)	1		
23	13	26996	LOCKWASHER (#10)	2		
24	11	68219	NUT (#10-32)	2		
25	10	98261	SCREW (3/8-16 X 3/4 IN.)	1		
26	12	20553	WASHER	1		
27	16	90096A 1	STUD ASSEMBLY	2		
28	54	72821	RETAINER	2		
.	27	861246A98	GASKET SET-ENGINE OVERHAU	1		