



1890

Parts List

| Ref | Class | Part | Description | Qty | Comment | Footnote |
|-----|-------|-----------|--------------------------------|-----|---------|----------|
| - | 46 | 807151A 9 | PUMP ASSEMBLY, Sea Water | 1 | | |
| 1 | 46 | 807151A14 | BODY/IMPELLER KIT | 1 | | |
| 2 | 25 | 33465 | O-RING | 1 | | |
| 3 | 10 | 807356 | SCREW, (.312-18 x 2.680) | 2 | | |
| 3 | 10 | 74822 | SCREW, (.312-18 x 3.500) | 3 | | |
| 4 | 12 | 814806 | WASHER, (.344 x .688 x .065) | 5 | | |
| 5 | 47 | 59362T 1 | IMPELLER | 1 | | |
| 6 | 25 | 94288 | QUAD RING | 1 | | |
| 7 | | 94576 | WEAR PLATE, Inner | 1 | | |
| 8 | 46 | 94913A 5 | HOUSING ASSEMBLY, Pump | 1 | | |
| 9 | 26 | 90562 | SEAL, (1.254 Outside Diameter) | 2 | | |
| 10 | 30 | 72961 | BEARING, Ball | 2 | | |
| 11 | | 59501A 1 | SHAFT | 1 | | |
| 12 | 53 | 23720 | RING, Retaining | 1 | | |
| 13 | 26 | 72785 | SEAL | 1 | | |
| 14 | | 861579 | PULLEY | 1 | | |
| 15 | 13 | 39107 | LOCKWASHER, (.312) | 3 | | |
| 16 | 11 | 21908 | NUT, (.312-18) | 3 | | |
| 17 | | 807749 1 | BRACKET | 1 | | |
| 18 | 10 | 34353 | SCREW, (.375-16 x 1.00) | 2 | | |
| 19 | 13 | 35048 | LOCKWASHER, (.375) | 2 | | |