



Parts List

Ref	Class	Part	Description	Qty	Comment	Footnote
1		860234A	1 HEAT EXCHANGER	1		
NS		814875	COVER-END	2		
NS	27	803644	GASKET-END COVER	2		
NS	10	814877	BOLT	2		
NS	25	814878	O-RING	2		
NS	36	814879	1 CAP-PRESSURE	1		
2		860326A	1 BRACKET ASSEMBLY-HEAT EXC	1		
3		18431	PAD	2		
4	54	815504388	CLAMP	2		
5		71587A10	RECOVERY KIT-COOLANT	1	(SEE NOTE)	
6		71587A11	BOTTLE-COOLANT RECOVERY	1		
7		72058	CAP	1		
8		861198A	1 HOUSING-THERMOSTAT	1		
9	25	807134	1 SEAL	1		3
10	23	863874	SLEEVE-HOSE	1		
11	22	32803	PLUG-PIPE (3/8 IN.)	1		
12		99155	1 THERMOSTAT	1		
13		807075A	1 COVER-THERMOSTAT	1		
14	10	29198	SCREW & LOCKWASHER (5/16-1	2		
15	10	58640	SCREW (3/8-16 X 1-1/4 IN.)	2		
16	22	32802	2 PLUG-PIPE (1/8 IN.)	1		
17	27	53045	1 GASKET-THERMOSTAT HOUSIN	2		3
18	32	42850	69 HOSE-HEAT EXCHANGER TO HE	1		
19	32	860421	HOSE-HEAT EXCHANGER TO EX	2	(PORT & STARBOARD)	
20	54	815504220	CLAMP	6		
21	32	860380	HOSE-THERMOSTAT BY-PASS	1		
22	32	860419	HOSE-THERMOSTAT HOUSING	1		
23	32	860332	HOSE-HEAT EXCHANGER TO TU	1		
24	54	815504222	CLAMP	6		
25	32	861059	HOSE-WATER PUMP TO HEAT E	1		
26	54	815504232	CLAMP	2		
27	32	860482	HOSE-WATER PUMP TO INTAKE	1		
28	54	815504212	CLAMP	2		
29	22	860346	ELBOW-90 DEG. (3/4 IN.)	1		
30	22	808042	ELBOW-90 DEG. (1/2 IN.)	1		
31	32	808045	HOSE-TUBE EXTENDER TO TRA	1		
32	32	808044	1 HOSE-TRANSMISSION OIL COOL	1		
NS	19	807992	3 COVER-HOSE CLAMP END	AR		2
.	27	861246A98	GASKET SET-ENGINE OVERHAU	1		