



23301

				Parts List		
Ref	Class	Part	Description	Qty	Comment	Footnote
1	84	862164T04	WIRING HARNESS	1		
2	88	865827T	CIRCUIT BREAKER, 50 Ampere	1		
3	11	826709106	NUT, (#10-32)	2		
4		899719T02	BRACKET, Harness Mounting/Liftir	1		
5	10	98261	SCREW, (.375-16 x .750)	2		
6		861516	BRACKET	1		
7		861543T 1	ICM MODULE	1		
8		861517	BRACKET	1	(5.0L Bravo)(5.7L Alpha/Bravo)	
9		806611T	MODULE, Knock Control	1		
10	10	41408	SCREW, (#10-32 x 1.50)	2	(5.0L Bravo)(5.7L Alpha/Bravo)	
11		806490T	SENDER	1		
11		49734	SENDER	OPT.	(Dual Station)	
12		805218T	SENSOR	1		
13	10	24323	SET SCREW, (.250-20 x 1.25)	3		
14	12	35462	WASHER, (.2656 x .625 x .0625)	3		
15	11	64015	NUT, (.250-20)	3		
16		899719T01	BRACKET	1		
17	10	830861	SCREW, (8-32 x .625)	2		
18	85	89919	BOOT, Insulator (Black)	2		
19	87	866089	THERMAL SWITCH, (Normally Opn)	1		
20	83	865913A01	PLUG, Diode	1		
21		882751	TRIM RELAY	1		
22	84	866734T01	HARNESS, Transmission	1		
23	88	832969 15	FUSE, Blue - 15 Ampere	1		
23	88	832969 20	FUSE, Yellow - 20 Ampere	1		
24		816492A 6	ALARM KIT	1		
25	22	32974	FITTING, (.125-27) Adaptor	1		
26	87	805605A 1	SWITCH ASSEMBLY	1		
27	13	26996	LOCKWASHER, (#10)	2		
28	11	68219	NUT, (#10-32)	2		
29		806612T	SENSOR, Knock	1		
30	22	806705 1	FITTING, Dual	1		
31	22	<a href="#">806608A 1</a>	PLUG KIT, Blue	1	(5.0L Alpha)	
32	25	62706	O-RING, (.426 x .070)	1	(5.0L Alpha)	
33	87	815425T	SENDER ASSEMBLY	1		
33		37293T	SENDER ASSEMBLY	OPT	(Dual Station)	
34	22	864669	FITTING	1		
35	87	864252	SWITCH, Oil Pressure	1		