



11050

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		805597A 1	BRACKET ASSEMBLY, Rear	2		1
2	10	37269	SCREW, (.437-14 x 2.00)	2		
2	10	91903	SCREW, (.437-14 x 1.750)	4		
3	13	32993	LOCKWASHER, (.437)	4		
4	10	57357	SCREW, (.437-13 x 2.250)	2		
5	13	32993	LOCKWASHER, (.437)	2		
6	11	29553	NUT, (.437-14)	2		
7		71128A 2	BRACKET	2		
8	10	68101	SCREW, (.375-16 x 1.375)	4		
9	16	805357	STUD, (.375-16 x 2.130)	2	(Starboard)	
10	13	35048	LOCKWASHER, (.375)	4		
11	10	37269	SCREW, (.437-14 x 2.00)	2		
12	13	32993	LOCKWASHER, (.437)	2		
13	11	29553	NUT, (.4375-14)	2		
14		806698 5	TRUNNION	4		
15	13	68102	LOCKWASHER, (.750)	2		
16		66284A 2	BASE ASSEMBLY, Engine End	2		
17	11	20739	NUT, (.750-16), Jam	2		
18	14	66658	TAB WASHER, Tab	2		
19		816326A 2	BASE ASSEMBLY, Transmission E	2		
20	16	816327	STUD, (.750-16 x Special)	2		
21		47656	MOUNT	4		
22	12	48611	WASHER	4		
23	11	816331	NUT, (.750-16), Jam	2		
24	14	66658	TAB WASHER, Tab	2		
25	11	20739	NUT, (.750-16), Jam	2		
26	54	78945	J CLAMP, Harness Support	1		