



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	46	807151A 9	PUMP ASSEMBLY-SEAWATER	1		
2	46	807151A14	BODY/IMPELLER KIT-WATER F	1		
3	25	33465	O-RING	1		5
4	10	807356	SCREW	2	(5/16-18 X 2-5/8 IN.)	
4	10	74822	SCREW	3	(5/16-18 X 3-1/2 IN.)	
5	12	814806	WASHER	5		
6	47	59362T 1	IMPELLER	1		5
7	25	94288	QUAD RING	1		5
8		94576	PLATE-WEAR (INNER)	1		5
9	46	94913A 5	HOUSING ASSEMBLY-PUMP	1		
10	26	90562	SEAL-OIL	2		
11	30	72961	BEARING-BALL	2		
12		59501A 1	SHAFT	1		
13	53	23720	RING-RETAINER	1		
14	26	72785	SEAL-OIL	1		
15		861579	PULLEY	1		
16	13	39107	LOCKWASHER (5/16 IN.)	3		
17	11	21908	NUT (5/16-18)	3		
18		807749 1	BRACKET	1		
19	10	34353	SCREW (3/8-16 X 1 IN.)	2		
20	13	35048	LOCKWASHER (3/8 IN.)	2		
21	12	34714	WASHER	1		
-	47	59362T 6	SEA WATER PUMP IMPELLER KI	1		