



A-AUDIO WARNING SYSTEM

- 1 - Drive Unit Oil Level
- 2 - OIL PRESSURE SWITCH

B-INSTRUMENTATION SYSTEM

- 1 - TRIM SENDER
- 2 - WATER TEMPERATURE SENDER
- 3 - OIL PRESSURE SENDER

C-CHARGING AND STARTING SYSTEM

- 1 - STARTER SLAVE SOLENOID
- 2 - CIRCUIT BREAKER
- 3 - STARTER
- 4 - GROUND STUD
- 5 - ALTERNATOR

A - CHARGING AND STARTING CIRCUIT

- B - AUDIO WARNING/POWER REDUCTION CIRCUIT
- C - INSTRUMENTATION SENDERS

- a - HARNESS CONNECTOR TO EFI SYSTEM HARNESS
- b - POSITIVE (+) POWER WIRE TO EFI SYSTEM HARNESS
- c - AUXILIARY TACHOMETER LEAD

Parts List

Ref	Class	Part	Description	Qty	Comment	Footnote
84		806656A	6 WIRING HARNESS (ENGINE)	1		

--	--	--	--	--	--	--