



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		18903T	BRACKET-REAR	2		
2	10	806195	SCREW (M12 X 45)	8		
3	13	38829	LOCKWASHER (1/2 IN.)	8		
4	10	57357	SCREW (7/16-14 X 2 IN.)	4		
5	13	32993	LOCKWASHER (7/16 IN.)	4		
6	11	29553	NUT (7/16-14)	4		
7		71128A 2	BRACKET-FRONT	2		
8	16	805357	STUD	4		
8	10	68101	SCREW (3/8-16 X 1-3/8 IN.)	2		
9	13	35048	LOCKWASHER (3/8 IN.)	2		
10	10	37269	SCREW (7/16-14 X 2 IN.)	2		
11	13	32993	LOCKWASHER (7/16 IN.)	2		
12	11	29553	NUT (7/16-14)	2		
13		66166A 4	TRUNNION	4		
14	13	68102	LOCKWASHER (3/4 IN.)	4		
15		66284A 2	BASE-ENGINE END	2		
16	11	20739	NUT JAM (3/4-16)	2		
17	14	66658	WASHER-TAB	2		
18		816326A 2	BASE-TRANSMISSION END	2		
19	11	816331	NUT JAM (3/4-16)	2		
20	14	66658	WASHER-TAB	2		
21	11	20739	NUT JAM (3/4-16)	4		
22	54	78945	J-CLAMP	1		