



A = SEE STANDARD COOLING FOR THESE HOSE PART NUMBERS

Parts List

Ref	Class	Part	Description	Qty	Comment	Footnote
1		860234A	HEAT EXCHANGER	1		1
2		860326A	BRACKET ASSEMBLY-HEAT EXC	1		1
3		18431	PAD	1		
4		77223	PAD	2		
5	54	815504388	CLAMP	2		
6		71587A10	RECOVERY KIT-COOLANT	1		
7		71587A11	BOTTLE-COOLANT RECOVERY	1		
8		72058	CAP	1		
9		861188A	HOUSING-THERMOSTAT	1		
10	25	807134	SEAL	1		4
11	23	52020	SLEEVE-HOSE	1		
12	22	32803	PLUG-PIPE (3/8 IN.)	1		
13		99155	THERMOSTAT	1		
14		807075A	COVER-THERMOSTAT	1		
15	10	29198	SCREW & LOCKWASHER (5/16-1	2		
16	10	58640	SCREW (3/8-16 X 1-1/4 IN.)	2		
17	22	32802	PLUG-PIPE (1/8 IN.)	1		
18	27	53045	GASKET-THERMOSTAT HOUSIN	1		4
19	32	860380	HOSE-THERMOSTAT BY-PASS	1		1
20	32	860328	HOSE-HEAT EXCHANGER TO EX	1	(STARBOARD)	1
21	32	860327	HOSE-HEAT EXCHANGER TO EX	1	(PORT)	1
22	54	815504220	CLAMP	6		
23	32	807691	HOSE-THERMOSTAT HOUSING	1		
24	32	860332	HOSE-OIL COOLER TO HEAT EX	1		1
25	54	815504222	CLAMP	4		
26	32	861059	HOSE-WATER PUMP TO HEAT E	1		1
27	54	815504232	CLAMP	2		
28	32	42850	HOSE-HEAT EXCHANGER TO HE	1		
29	32	860482	HOSE-WATER PUMP TO INTAKE	1		1
30	54	815504212	CLAMP	4		
31	22	860346	ELBOW-90 DEG. (3/4 IN.)	1		1
32	22	808042	ELBOW-90 DEG. (1/2 IN.)	1		
-	27	75611A96	GASKET SET-ENGINE OVERHAU	1		