



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		SEE CHART	TRANSMISSION	1	(SEE "TRANSMISSION ORDERI	
2	10	60179	SCREW	6		
3	13	32993	LOCKWASHER	6		
4	32	47516 13	HOSE (49")	1		
5	87	88031	TEMPERATURE SWITCH	1		
6		79476A 1	FLANGE ASSEMBLY (1")	OPT		5
6		79476A 2	FLANGE ASSEMBLY (1-1/8")	OPT		5
6		79476A 3	FLANGE ASSEMBLY (1-1/4")	OPT		5
6		79476A 4	FLANGE ASSEMBLY (1-3/8")	OPT		5
6		79476A 5	FLANGE ASSEMBLY (1-1/2")	OPT		5
7	10	60171	SCREW (1-1/4")	2		
7	10	60169	SCREW (3/4")	2		
8	10	805159	SCREW (1-1/2")	4		
9	13	32993	LOCKWASHER	4		
10	11	22024	NUT	4		
11	22	47629	ELBOW (90_)	4		
12	22	88517	ADAPTER	1		
13		63832T	OIL COOLER	1		
14		56328A 1	BRACKET (SHORT)	1		
15		63820 3	BRACKET (LONG)	1		
16	10	69028	SCREW (3/4")	2		
17	11	30506	NUT	2		
18		43325	SHIFT LEVER	1		
19	12	20722	WASHER	1		
20	13	26993	LOCKWASHER	1		
21	11	22053	NUT	1		
22	12	36533	WASHER	4		
23	32	47516 13	HOSE (44")	1		
24	16	97477A 3	STUD	1		
25		47613	NEUTRAL START SWITCH	1		