



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		52158A20	BRACKET (REAR)	2		
2	10	47462	SCREW	4		
3	13	32993	LOCKWASHER	4		
4	10	47724	SCREW	2		
5	13	32993	LOCKWASHER	2		
6	54	47528	CLAMP	4		
7	11	29553	NUT	2		
8		71128A 2	BRACKET (FRONT)	2		
9	10	68101	SCREW	6		
10	13	35048	LOCKWASHER	6		
11	10	57357	SCREW	2		
12	13	32993	LOCKWASHER	2		
13	11	29553	NUT	2		
14		66166A 4	TRUNNION	4		
15	13	68102	LOCKWASHER	4		
16		66284A 2	BASE	2	ENGINE	
17	11	20739	JAM NUT	2	ENGINE	
18	14	66658	TAB WASHER	2	ENGINE	
19		816326A 2	BASE	2	TRANSMISSION	
20	11	816331	JAM NUT	2	TRANSMISSION	
21	14	66658	TAB WASHER	2	TRANSMISSION	
22	11	20739	JAM NUT	4		