



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	735	6370	PISTON AND PISTON PIN ASSEM	AR		
1	735	6371	PISTON AND PISTON PIN ASSEM	AR		
2	39	65153	RING, PISTON - 8 SETS (STANDA	8		
2	39	67126	RING, PISTON - 8 SETS (.030 O.S	AR		
3	23	85694	BEARING UNIT, CRANKSHAFT (S	4		
3	23	85695	BEARING UNIT, CRANKSHAFT M	AR		
3	23	85696	BEARING UNIT, CRANKSHAFT M	AR		
3	23	85697	BEARING UNIT, CRANKSHAFT M	AR		
4	23	85698	BEARING UNIT, CRANKSHAFT M	1		
4	23	85699	BEARING UNIT, CRANKSHAFT M	AR		
4	23	85699	BEARING UNIT, CRANKSHAFT M	AR		
4	23	85700	BEARING UNIT, CRANKSHAFT M	AR		
4	23	52216	BEARING UNIT, CRANKSHAFT M	AR		
5	17	35312	PIN, DOWEL - REAR BEARING C	1		
6	26	58203	OIL SEAL, REAR BEARING CAP (L	2		4,9
6	26	35313	OIL SEAL, REAR BEARING CAP (R	2		4,9
7	230	9425	FLYWHEEL (L.H. ROTATION - 14'	1		9
7	230	4614	FLYWHEEL (R.H. ROTATION - 12'	1		9
7	222	9520	FLYWHEEL (L.H. ROTATION - 14'	1		8
7	222	9558	FLYWHEEL (R.H. ROTATION - 14'	1		8
8	10	49845	SCREW, FLYWHEEL TO CRANKS	6		
9	13	39131	LOCKWASHER, FLYWHEEL SCR	6		
10		47608A	DRIVE PLATE, FLYWHEEL	1		
11	10	35091	SCREW, DRIVE PLATE TO FLYW	6		
12	13	35048	LOCKWASHER, DRIVE PLATE SC	6		
13	614	8164	CONNECTING ROD ASSEMBLY	8		
14	10	85802	BOLT, CONNECTING ROD CAP	16		
15	11	37493	NUT, CONNECTING ROD CAP	16		
16	23	85701	BEARING SET, CONNECTING RO	8		
16	23	85702	BEARING UNIT (PAIR), CONNECT	AR		
16	23	85703	BEARING UNIT (PAIR), CONNECT	AR		
16	23	85704	BEARING UNIT (PAIR), CONNECT	AR		
16	23	85705	BEARING UNIT (PAIR), CONNECT	AR		
17	429	6369	CRANKSHAFT (L.H. ROTATION)	1		9
17	429	6372	CRANKSHAFT (R.H. ROTATION)	1		9
17	429	9521	CRANKSHAFT (L.H. ROTATION)	1		8
17	429	9526	CRANKSHAFT (R.H. ROTATION)	1		8
18	28	34466	KEY, CRANKSHAFT PULLEY ANC	2		