



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		44187A 1	HOUSING, FLYWHEEL	1		
2	19	12304	PLUG, TIMING WINDOW	1		
3		14043A 4	COVER ASSY., FLYWHEEL HOUSING	1		
3		14043A 5	COVER ASSY., FLYWHEEL HOUSING	1		
4		87690	SEAL, FLYWHEEL HOUSING COVER	1		
5	27	86015	GASKET, FLYWHEEL HOUSING	1		
6	10	98253	SCREW, COVER TO FLYWHEEL HOUSING	8		
7	13	26992	LOCKWASHER, COVER SCREW	8		
8	10	34353	SCREW, FLYWHEEL HOUSING (1)	4		
8	10	47688	SCREW, FLYWHEEL HOUSING (2)	2		
8	10	48424	SCREW, FLYWHEEL HOUSING (1)	2		
9	13	35048	LOCKWASHER, FLYWHEEL HOUSING	7		
10	54	78945	J CLAMP, FLYWHEEL HOUSING COVER	2		
11	16	64066	STUD, FLYWHEEL HOUSING (2-1)	2		
12	12	20572	WASHER, FLYWHEEL HOUSING	2		
13	11	32219	NUT, FLYWHEEL HOUSING STUD	2		
14		93920	PLATE, FLYWHEEL HOUSING-L.H.	1		
15	10	33212	SCREW, PLATE -L.H. ROTATION	2		
16	13	32993	LOCKWASHER, PLATE SCREW	2		
17		12543A 2	BRACKET ASSEMBLY, SHIFT CABLE	1		
18	11	25594	NUT, SHIFT CABLE STUD	2		
19	10	54615	SCREW, BRACKET TO FLYWHEEL HOUSING	2		
20	13	26992	LOCKWASHER, BRACKET SCREW	2		
21		12505A 1	ADAPTOR ASSEMBLY	1		
22		12506	CLIP, ADAPTOR	1		