



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		66417	BRACKET, TRANSMISSION (REA	2		
2	10	37269	SCREW, BRACKET (2")	4		
3	13	32993	LOCKWASHER, BRACKET SCRE	4		
4	10	57357	SCREW, CLAMPING (2-1/4")	2		
5	13	32993	LOCKWASHER, CLAMPING SCRE	2		
6	11	29553	NUT, CLAMPING SCREW	2		
7		71128A	BRACKET, MOUNTING - ENGINE	2		
8	10	68101	SCREW, MOUNTING BRACKET (5		
8	10	34354	SCREW, MOUNTING BRACKET (1		
9	13	35048	LOCKWASHER, MOUNTING BRA	6		
10	10	37269	SCREW, CLAMPING - MOUNTING	2		
11	13	32993	LOCKWASHER, CLAMPING SCRE	2		
12	11	29553	NUT, CLAMPING SCREW	2		
13		66166A	TRUNNION, ADJUSTING - MOUN	4		
14	13	68102	LOCKWASHER, MOUNTING BRA	4		
15		66284A	BASE, ENGINE MOUNT	4		
16	11	20739	NUT, JAM - ENGINE MOUNT BA	8		
17	14	66658	TAB WASHER, BASE NUT	4		