



MC0004

				Parts List		
Ref	Class	Part	Description	Qty	Comment	Footnote
1	84	12307A 2	WIRING HARNESS	1		
2		97258A 1	TEMPERATURE SENDER	1		
2		49734A 1	TEMPERATURE SENDER (DUAL)	OPT.		
3	13	26996	LOCKWASHER, WATER TEMPE	1		
4	11	68219	NUT, WATER TEMPERATURE	1		
5		90806	OIL PRESSURE SENDER	1		
5		37293	OIL PRESSURE SENDER (DUAL)	OPT.		
6	13	26996	LOCKWASHER, OIL PRESSURE	1		
7	11	68219	NUT, OIL PRESSURE SENDER	1		
8	22	46932	ELBOW, OIL PRESSURE SENDE	1		
9	22	42554	NIPPLE, OIL PRESSURE SENDE	1		
10		41170A 2	BRACKET, MOUNTING	1		
11	10	98260	SCREW, MOUNTING BRACKET (E	1		
12	13	35048	LOCKWASHER, MOUNTING BRA	2		
13	16	24585 1	STUD, MOUNTING BRACKET	1		
14	23	88275	SPACER, MOUNTING BRACKET	1		
15	12	20086	WASHER, MOUNTING BRACKET	1		
16	13	35048	LOCKWASHER, MOUNTING BRA	1		
17	11	24883	NUT, MOUNTING BRACKET STU	1		
18	88	11178	CIRCUIT BREAKER (50 AMP.)	1		
19	13	26996	LOCKWASHER, CIRCUIT BREAK	2		
20	11	68219	NUT, CIRCUIT BREAKER TERMIN	2		
21	10	45862	SCREW, CIRCUIT BREAKER (7/8	2		
22	10	71405	SCREW, INSULATOR	1		
23	12	56681	WASHER, CIRCUIT BREAKER SC	3		
24	11	46438	NUT, INSULATOR SCREW	3		
25	85	96819	INSULATOR, CIRCUIT BREAKER	1		
26	89	96054	STARTER SOLENOID	1		
27	10	47910	SCREW, STARTER SOLENOID (5	2		
28	11	20088	NUT, STARTER SOLENOID SCRE	2		
29	13	26992	LOCKWASHER, STARTER SOLE	2		
30	11	26419	NUT, STARTER SOLENOID TERM	2		
31	11	94330	NUT, STARTER SOLENOID TERM	2		