



MC0002

Parts List					
Ref	Class	Part	Description	Qty	Footnote
	50	12177A 2	STARTER (L.H. ROTATION)	1	
	50	79604A 3	STARTER (R.H. ROTATION)	1	
1		75666	HOUSING, DRIVE END - L.H. R	1	9
1		13754	HOUSING, DRIVE END - L.H. R	1	0,2
1		79206	HOUSING, DRIVE END (R.H. R	1	
2	23	33369	BUSHING	1	
3		33292	COLLAR, THRUST	1	
4	53	33290	RING, RETAINING	1	
5		33291	COLLAR	1	
6		79205	DRIVE ASSEMBLY, CLUTCH (L.	1	
6		68609	DRIVE ASSEMBLY, CLUTCH (R.	1	
7		79396	PLATE, BEARING	1	
8	23	71694	BUSHING, BEARING PLATE	1	
9	12	68614	WASHER, BEARING PLATE	1	
10		N.S.S.	SCREW (DELCO REMY #19727)	2	0,9
11		71693	ARMATURE - L.H. ROTATION	1	0,9
12		N.S.S.	SHOE, POLE (DELCO REMY #1	4	2,2,2
10		N.S.S.	SCREW (DELCO REMY #19840	2	
11		75665	ARMATURE - L.H. ROTATION	1	
12		N.S.S.	SHOE, POLE (DELCO REMY #8	4	
10	10	75659	SCREW - R.H. ROTATION	2	
11		68607	ARMATURE - R.H. ROTATION	1	
12		N.S.S.	SHOE, POLE (DELCO REMY #8	4	
13		N.S.S.	SCREW, POLE SHOE TO FELD	4	
14	25	79208	GROMMET, FIELD FRAME (L.H.	1	
14		N.S.S.	GROMMET, FRAME (DELCO RE	1	
15		79212	FIELD COIL ASSEMBLY - L.H. R	1	0,9
15		75664	FIELD COIL ASSEMBLY - L.H. R	1	
15		75664	FIELD COIL ASSEMBLY (R.H. R	1	
16	12	33258	WASHER, LEATHER - COMMU	1	
17		79211	FRAME, COMMUTATOR END -	1	
18		N.S.S.	BOLT, THRU (DELCO REMY #1	1	
18		N.S.S.	BOLT, THRU (DELCO REMY #1	1	
19		33284	HOLDER, INSULATED	2	
20		33283	HOLDER, FIELD FRAME BRUSH	2	
21		33270	BRUSH, FIELD FRAME	4	
22		N.S.S.	SCREW, BRUSH LEAD (DELCO	2	
22		N.S.S.	SCREW, BRUSH LEAD (DELCO	2	
23		33294	SUPPORT PACKAGE, GROUND	2	
24	24	33285	SPRING, FIELD FRAME BRUSH	4	
25		N.S.S.	PIN, DOWEL, FIELD FRAME	2	