



| Parts List | | | | | | |
|------------|-------|-----------|-----------------------------|-----|----------------|----------|
| Ref | Class | Part | Description | Qty | Comment | Footnote |
| 1 | 46 | 807151A 9 | PUMP ASSEMBLY-SEAWATER | 1 | | |
| 2 | 46 | 807151A 7 | BODY AND COVER | 1 | TWO PIECE BODY | |
| 3 | 27 | 805215 1 | GASKET | 1 | TWO PIECE BODY | |
| 4 | 10 | 73275 | SCREW (5/16-18 X 2-7/8 IN.) | 2 | TWO PIECE BODY | |
| 4 | 10 | 99347 | SCREW (5/16-18 X 3-3/4 IN.) | 3 | TWO PIECE BODY | |
| 5 | 12 | 20084 | WASHER | 5 | TWO PIECE BODY | |
| 6 | | 94916 | PLATE-WEAR (OUTER) | 1 | TWO PIECE BODY | |
| 7 | 27 | 94914 | GASKET | 2 | TWO PIECE BODY | |
| 8 | 46 | 807151A 7 | BODY-WATER PUMP | 1 | ONE PIECE BODY | |
| 9 | 25 | 807149 | QUAD RING | 1 | ONE PIECE BODY | |
| 10 | 10 | 807356 | SCREW (5/16-18 X 2-5/8 IN.) | 2 | ONE PIECE BODY | |
| 10 | 10 | 74822 | SCREW (5/16-18 X 3-1/2 IN.) | 3 | ONE PIECE BODY | |
| 11 | 12 | 814806 | WASHER | 5 | ONE PIECE BODY | |
| 12 | 47 | 59362 1 | IMPELLER | 1 | | |
| 13 | | 94576 | PLATE-WEAR (INNER) | 1 | | |
| 14 | 25 | 94288 | QUAD RING | 1 | | |
| 15 | 46 | 94913A 5 | HOUSING ASSEMBLY-PUMP | 1 | | |
| 16 | 26 | 90562 | SEAL-OIL | 2 | | |
| 17 | 30 | 72961 | BEARING-BALL | 2 | | |
| 18 | | 59501A 1 | SHAFT | 1 | | |
| 19 | 53 | 23720 | RING-RETAINER | 1 | | |
| 20 | 26 | 72785 | SEAL-OIL | 1 | | |
| 21 | | 807731T | PULLEY | 1 | | |
| 22 | 13 | 39107 | LOCKWASHER (5/16 IN.) | 3 | | |
| 23 | 11 | 21908 | NUT (5/16-18) | 3 | | |
| 24 | | 807749T | BRACKET | 1 | | |
| 25 | 10 | 34353 | SCREW (3/8-16 X 1 IN.) | 2 | | |
| 26 | 13 | 35048 | LOCKWASHER (3/8 IN.) | 2 | | |
| 27 | 12 | 34714 | WASHER | 1 | | |