



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	50	822330A 2	STARTER ASSEMBLY	1	(3.500 IN. DIAMETER END CAP)	3
2		811862	FRAME	1		
3	30	814465	BEARING-Ball	1		
4		811863	HOLDER-Brush	1		
5	24	814467	SPRING-Brush	4		
6		814469	ARMATURE	1		
7		811882	SHIELD	1		
8		811897	GEAR AND BEARING	1		
9		814479	BEARING-Roller	1		
10		814472	SHAFT AND GEAR ASSEMBLY	1		3
11		811896	DRIVE	1		
12		33291	COLLAR	1		
13	53	33290	RING-Retaining	1		
14		814474	COLLAR-Thrust	1		
15		814475	DRIVE HOUSING ASSEMBLY	1	INCLUDES STARTER SWITCH.	
16	23	814476	BEARING	1		
17		NSS	NUT	1		2
18	10	814468	SCREW	2		
19	10	814477	THRU BOLT	2		