



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	50	822330A 2	STARTER ASSY (3.500 Dia.)	1	(BRAVO) (SEE INDEX FOR BRE/	3
1	50	806964A 2	STARTER ASSY (2.875 Dia.)	1	(BRAVO) (SEE INDEX FOR BRE/	3
1	50	806964A 3	STARTER ASSY (2.875 Dia.)	1	(BRAVO) (SEE INDEX FOR BRE/	
2	10	805343 2	SCREW-Special (.375-16 x 4.330)	1		
2	10	848690 1	SCREW-Special (.375-16 x 4.00)	1		
3		89057	BRACE-Starter Mounting	1		
4	12	29245	WASHER	2		
5	11	56374	NUT (.250-20)-Brace to Starter	1		
6	10	35765A 1	SCREW KIT (.312-18 x .625)-Brace	1		
7	22	32561 1	PLUG-Special (.250)-Engine Block	1		
8	11	40021 1	NUT (5M)-Starter Terminal	1		
9	85	79695	BOOT	1		
10	11	15874	NUT (10M)-Starter Terminal	1		
11	15	817272 1	SHIM-Starter to Engine	AR		7
12	50	17251A 3	STARTER ASSY	1	(DRIVELINE) (SEE INDEX FOR F	3
12	50	808011A 1	STARTER ASSY	1	(DRIVELINE) (SEE INDEX FOR F	
13	10	47461	SCREW (.437-14 x 1.00)-Starter to	2		
14	13	32993	LOCKWASHER (.437)	2		
15	13	26993	LOCKWASHER (#10)	1		
16	11	40026 6	NUT (10M)-Starter Terminal	1		
17		817119 1	ALTERNATOR ASSY (BLUE)	1	(SEE INDEX FOR PARTS BREAK	
17		817119A 4	ALTERNATOR ASSY (BLACK)	1	(SEE INDEX FOR PARTS BREAK	
18	13	26992	LOCKWASHER (.250)	1		
19	11	56374	NUT (.250-20)	1		
20	12	96457	WASHER	1		
21	13	26996	LOCKWASHER (#10)	1		
22	11	79989	NUT (#10-24)	1		
23		85013T	BRACE-Alternator	1		
24	12	45176	WASHER	1		
25	10	99204	SCREW (.437-14 x 1.00)	1		
26	12	26168	WASHER	1		
27		815251A 1	BRACKET KIT-Alternator Mount	1		
28	23	33186	BUSHING	1		
29	12	20553	WASHER	3		
30	10	48308	SCREW (.375-24 x 3.750)	1		
31		57908 11	SLEEVE-Alternator Lead (10.00 In.	1		
32	10	29198	SCREW WITH LOCKWASHER (.3	1		
33	13	32993	LOCKWASHER (.437)	3		
34	10	35047	SCREW (.375-16 x 1.250)	1		
34	10	65210	SCREW (.375-16 x 1.00)	2		
35	12	45176	WASHER	2		