



Parts List					Qty	Comment	Footnote
Ref	Class	Part	Description				
1	46	72774T38	PUMP ASSEMBLY-Sea Water	1			
2	46	72774A89	BODY/IMPELLER KIT	1			
3	27	805215 1	GASKET	1	(Cover To Outer Wear Plate)		
4	27	94914	GASKET	2	(Body To Wear Plate)		
5	47	59362T 1	IMPELLER	1			
6	25	94288	QUAD RING	1			
7		87631A 4	COVER KIT-Sea Water Pump	1	(Also Includes #3)		
8	12	20084	WASHER	5			
9	10	73275	SCREW (.312-18 x 2.875)	5			
10		94916	WEAR PLATE -Outer	1			
11		94576	WEAR PLATE -Inner	1			
12	46	94913A 1	HOUSING ASSEMBLY-Sea Water	1			
13	26	90562	SEAL-Oil	2			
14	30	72961	BEARING-Ball	2			
15		59501A 1	SHAFT	1			
16	53	23720	RING-Retaining	1			
17	26	72785	SEAL-Oil	1			
18		47530	HUB	1			
19		73798 1	PULLEY-Sea Water Pump	1	(Blue)		
20	10	849198	SCREW (.312-24 x .750)	4			
21	13	39107	LOCKWASHER (.312)	4			
22	22	32802 2	PLUG-Pipe	1	(For Sea Water Pump Body)		
23	57	74271T	V BELT	1			
24		47489 1	BRACKET	1			
25	10	34354	SCREW (.375-16 x 1.500)	1			
26	13	35048	LOCKWASHER (.375)	1			
27	12	45176	WASHER	2			
28	12	27025	WASHER	1			
29	10	825427	SCREW (.437-14 x 1.250)	1	(Bracket To Block-Bottom)		
30	10	48948	SCREW (.437-14 x .875)	1	(Bracket To Block-Top)		
31	12	29330	WASHER	1	(For Slot)		
32		47544	BRACE-Water Pump	1			
33	10	34353	SCREW (.375-16 x 1.00)	1	(Brace To Oil Pan)		
34	12	38622	WASHER	3	(Brace To Oil Pan)		
35	10	35786	SCREW (.375-24 x 1.00)	1			
36	13	35048	LOCKWASHER (.375)	1			
37	11	46335	NUT (.375-24)	1			