



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	50	806964A 3	STARTER ASSEMBLY	1	(See Starter Assembly (50-806964	
2	10	805343 2	SCREW (Special)	1	(.375-16 x 4.330) (Bravo Models)	
2	10	848690 1	SCREW (Special)	1	(.375-16 x 4.00) (Bravo Models)	
3	11	40021 1	NUT (5M)	1		
4	85	79695	BOOT-Insulator	1		
5	11	40063 5	NUT (8M)	1	(Bravo Models)	
6	15	817272 1	SHIM-Special	1	(Bravo Models)	
7	88	79023A91	FUSE ASSEMBLY (90 AMP)	1		
8	11	35045	NUT (.250-28)	2		
9	13	26996	LOCKWASHER (#10)	1		
10		817119 1	ALTERNATOR	1	(Blue) (See Alternator Assembly (M	
11	13	26992	LOCKWASHER (.250)	1		
12	11	56374	NUT (.250-20)	1		
13	12	96457	WASHER	1		
14	13	26996	LOCKWASHER (#10)	1		
15	11	79989	NUT (#10-24)	1		
16		85013T	BRACE-Alternator Adjusting	1		
17	12	45176	WASHER	1		
18	10	99204	SCREW (.437-14 x 1.00)	1		
19	12	26168	WASHER	1		
20	10	29198	SCREW AND LOCKWASHER (.31	1		
21		815251T 1	BRACKET ASSEMBLY-Alternator M	1		
22	23	33186	BUSHING	1		
23	12	20553	WASHER	3		
24	10	48308	SCREW (.375-24 x 3.750)	1		
25		57908 11	SLEEVE-Alternator Lead	1	(10.00 Inches Bulk) (Cut As Requi	
26	12	856774	WASHER	3		
27	10	65210	SCREW	2	(.375-16 x 1.00)	
27	10	35047	SCREW	1	(.375-16 x 1.250)	
28	11	23161	NUT (.375-24)	1		
29	54	62494	CLIP-Water Hose Support	1		