



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	11	23161	NUT (.375-24)	1		
2	12	20553	WASHER	3		
3		848146T	BRACKET-Alternator Mount	1		
4	54	848130	CLIP-Circulating Pump Hose	1		
5	12	45176	WASHER	3		
6	10	99204	SCREW	2	(.437-14 x 1.00)	
6	10	825427	SCREW	1	(.437-14 x 1.250)	
7		57908 11	SLEEVE-Alternator Lead	1		
8		817119 1	ALTERNATOR ASSEMBLY (Blue)	1	(See Alternator Section For Service)	
9	11	56374	NUT (.250-20)	1		
10	13	26992	LOCKWASHER (.250)	1		
11	11	79989	NUT (#10-24)	1		
12	13	26996	LOCKWASHER (#10)	1		
13	12	96457	WASHER	1		
14	23	33186	BUSHING	1		
15	10	48308	SCREW (.375-24 x 3.750)	1		
16		85013T	BRACE-Alternator Adjusting	1		
17	12	26168	WASHER	1		
18	10	29198	SCREW/LOCKWASHER (.312-18)	1		
19	12	45176	WASHER	1		
20	10	99204	SCREW (.437-14 x 1.00)	1		
21	50	806964A 3	STARTER ASSEMBLY (Complete)	1	(See Starter Assembly Section For)	
22	88	79023A91	FUSE ASSEMBLY (90 AMP)	1		
23	11	35045	NUT (.250-28)	1		
24	13	26996	LOCKWASHER (#10)	1		
25	11	40063 5	NUT (8M)	1		
26	85	79695	BOOT-Insulator	1		
27	11	40021 1	NUT (5M)	1		
28	10	805343 2	SCREW (Special)	2		
29	15	817272 1	SHIM (Special)	1		