



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-	50	99418A 2	STARTER ASSEMBLY	1	(BRAVO PLUG-IN MODELS)	
1		75666	HOUSING ASSEMBLY	1		
2	23	33369	BUSHING-Drive End Housing	1		
3		814474	COLLAR-Thrust	1		
4	53	33290	RING-Retaining-Pinion Stop Colla	1		
5		33291	COLLAR-Pinion Stop	1		
6		79205	DRIVE ASSEMBLY-Clutch	1		
7		79396	PLATE-Bearing	1		
8	23	71694	BUSHING-Bearing Plate	1		
9	12	68614	WASHER-Bearing Plate	1		
10	10	79209	SCREW-Bearing	2		
11		75665	ARMATURE	1		
12		NSS	SHOE-Pole-Field Coil	4	(Delco Remy #810601)	3
13		NSS	SCREW	4	(Delco Remy #1968396)	3
14		NSS	GROMMET-Field Coil	1	(Delco Remy #1846097)	3
15		75664	FIELD COIL ASSEMBLY	1		
16	12	33258	WASHER-Leather-Commutator E	1		
17		79211	FRAME-Commutator End	1		
18		NSS	BOLT-Thru	1	(Delco Remy #1941111)	3
19		NSS	BOLT-Thru	1	(Delco Remy #1939970)	3
20		33284	HOLDER-Insulated-Field Frame B	2		
21		33283	HOLDER-Field Frame Brush Grou	2		
22		33270	BRUSH-Field Frame	4		
23		22	SCREW-Brush Lead	2	(Delco Remy #1967747)	3
24		22	SCREW-Brush Lead	2	(Delco Remy #443527)	3
25		33294	SUPPORT	2		
26	24	33285	SPRING-Field Frame Brush	4		
27		25	PIN-Dowel	1	(Delco Remy #1985696)	3
28		26	LEVER-Shift	1		
29		27	STUD-Shift Lever	1	(Delco Remy #1945804)	3
30	53	33354	RING-Retaining-Stud	1		
31		33317	PLUNGER-Shift Lever	1		
32	17	79207	PIN-Plunger to Shift Lever	1		
33	24	46889	SPRING-Plunger Return	1		
34		32	SCREW	2	(Delco Remy #9413260)	3
35	89	18080	SOLENOID	1		