

Parts List

| Ref | Class | Part      | Description                       | Qty | Comment | Footnote |
|-----|-------|-----------|-----------------------------------|-----|---------|----------|
| -   | 90    | 848826980 | MANUAL-Operation And Maintenar    | 1   |         | 13       |
| -   | 90    | 849250    | GUIDE-Hi Performance Boat Operati | 1   |         | 13       |
| -   | 90    | 853984R   | PARTS CATALOG (Engine)            | 1   |         | 13       |
| -   | 90    | 853693    | PARTS CATALOG (Transoms-VI Ar     | 1   |         | 13       |

NO IMAGE