



Parts List

| Ref | Class | Part | Description | Qty | Comment | Footnote |
|-----|-------|-----------|-----------------------------|-----|----------------------------|----------|
| 1 | 50 | 806964A 4 | STARTER MOTOR ASSEMBLY | 1 | (SEE "STARTER MOTOR (PG26) | |
| 2 | 10 | 805343 2 | SCREW (3/8-16 X 4-3/8 IN.) | 2 | | |
| 3 | 11 | 806949 | NUT (M8 X 1.5) | 1 | | |
| 4 | 11 | 40021 1 | NUT (M5 X 0.8) | 1 | | |
| 5 | 13 | 39107 | LOCKWASHER (5/16 IN.) | 1 | | |
| 6 | 13 | 26996 | LOCKWASHER (#10) | 1 | | |
| 7 | 85 | 79695 | BOOT-INSULATOR | 1 | | |
| 8 | 88 | 79023A91 | FUSE ASSEMBLY (90 AMP) | 1 | | |
| 9 | 11 | 21825 | NUT (1/4-28) | 1 | | |
| 10 | | 861047 | BRACKET-ALTERNATOR | 1 | | |
| 11 | 10 | 56743 | SCREW (3/8-24 X 3-1/8 IN.) | 1 | | |
| 12 | 11 | 23161 | NUT (3/8-24) | 1 | | |
| 13 | 10 | 29198 | SCREW & LOCKWASHER (5/16-1 | 1 | | |
| 14 | 10 | 17965 | SCREW (7/16-14 X 11/16 IN.) | 2 | | |
| 15 | 16 | 806591 | STUD-ALTERNATOR & SEAWATE | 1 | | |
| 16 | | 861046 | BRACKET-POWER STEERING/LI | 1 | | |
| 17 | 16 | 861174 | STUD (7/16-14 X 1 IN.) | 2 | | |
| 18 | 11 | 29553 | NUT (7/16-14) | 2 | | |
| 19 | | 807653I | ALTERNATOR ASSEMBLY | 1 | (SEE "ALTERNATOR (MANDO)" | |
| 20 | 12 | 96457 | WASHER-PHENOLIC | 1 | | |
| 21 | 13 | 26996 | LOCKWASHER (#10) | 1 | | |
| 22 | 11 | 79989 | NUT (#10-24) | 1 | | |
| 23 | 13 | 26992 | LOCKWASHER (1/4 IN.) | 1 | | |
| 24 | 11 | 94330 | NUT (1/4-20) | 1 | | |
| 25 | | 861045 | BRACKET-IDLER | 1 | | |
| 26 | 10 | 92913 | SCREW (7/16-14 X 3/4 IN.) | 1 | | |
| 27 | 11 | 29553 | NUT (7/16-14) | 1 | | |
| 28 | 43 | 818381 2 | PINION STUD | 1 | | |
| 29 | | 818380T | BUSHING | 1 | | |
| 30 | | 807757T | PULLEY-IDLER | 1 | | |
| 31 | 11 | 859135 | NUT (7/16-20) | 1 | | |